Owner's Manual

SMART·LOGIC®

Featuring

ShareTab™ Technology

www.vizualogic.com

Table of Contents

1. Home Screen *Pg. 4*
2. Smart Icons *Pg. 5*
3. Settings *Pg. 6*
a. Wi-Fi *Pg. 6*
b. Bluetooth *Pg. 7*
c. Data Usage *Pg. 8*
d. More Options *Pg. 9*
e. Sound *Pg. 10*
f. Display *Pg. 11*
g. HDMI Output *Pg. 12*
h. Screen Shot *Pg. 13*
i. Storage *Pg. 14*
j. Battery *Pg. 15*
k. Apps *Pg. 16*
l. Location Access *Pg. 17*
m. Security *Pg. 18*
n. Language and Input *Pg. 19*
o. Backup and Reset *Pg. 20*
p. Add Accounts *Pg. 21*
q. Date and Time *Pg. 22*
r. Accessibility *Pg. 23*
s. About Tablet *Pg. 24*

Table of Contents Continued

4. SmartDVD App *Pg. 25-26*
- *a. Operating SmartDVD* *Pg. 27-28*
- *b. Preferences* *Pg. 29*
- *c. AutoPlay* *Pg. 30*
- *d. Resume Playback* *Pg. 30*
- *e. SmartPlay Settings* *Pg. 30*
- *f. Add/Update Disc (Basic)* *Pg. 31-33*
- *g. Add/Update Disc (Advanced)* *Pg. 34*
- *h. Power* *Pg. 35-36*

5. SmartLogic Automotive Settings *Pg. 37*
- *a. Battery Saver* *Pg. 38*
- *b. Key Power Function* *Pg. 39*
- *c. Wireless Headphones* *Pg. 39*
- *d. Android App Auto On* *Pg. 40*
- *e. Default Settings* *Pg. 40*

6. FM Transmitter *Pg. 41-42*

7. Closing Running Apps *Pg. 43*

8. Update the Tablet *Pg. 44-46*

9. Web Site for SmartLogic Tablet *Pg. 47*

1. Home Screen

The new GUI interface has 18 Smart Icons that make navigating easy and fast without having to search through a sea of icons. By sliding your finger to the left or to the right you will be able to view more Icons giving you access to other popular Apps.

Back Button Go back to previous screen

Home Screen Button Takes you to main menu

Recent Apps Button Recently opened apps

ShareTab™ Video Sharing Button source Wired mirror sharing

Volume down Button Decrease volume

Volume up Button Increase volume

Our Exclusive ***ShareTab™ Technology*** allows you to share and view content between both tablets with a single touch of the **Source** Icon on the front of each Tablet.

2. Smart Icons

Apps

You can access the Tablets default Apps (Applications) or your own downloaded Apps

SmartDVD

When you insert the DVD, you must open the SmartDVD app to play your DVD movie.

Browser

You can browse the internet with a solid Wi-Fi connection

My Movies

You can store and access your downloaded movie files.

Games

You can access the Tablets default games or your own downloaded games.

To add your downloaded games to this file you will need to open your Apps page and hold down the desired game App. This will take you to the Home page where you can drag the game App to the Games folder. 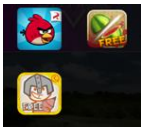

SD/USB

You can access your files from your mini SD card, USB Thumb Drive or Hard Drive.
Note: You can use up to a 32 GB on the mini SD card.

Other Smart Icons include short cuts to Netflix, Hulu, Skype, Google, Gmail and YouTube.

3. Settings

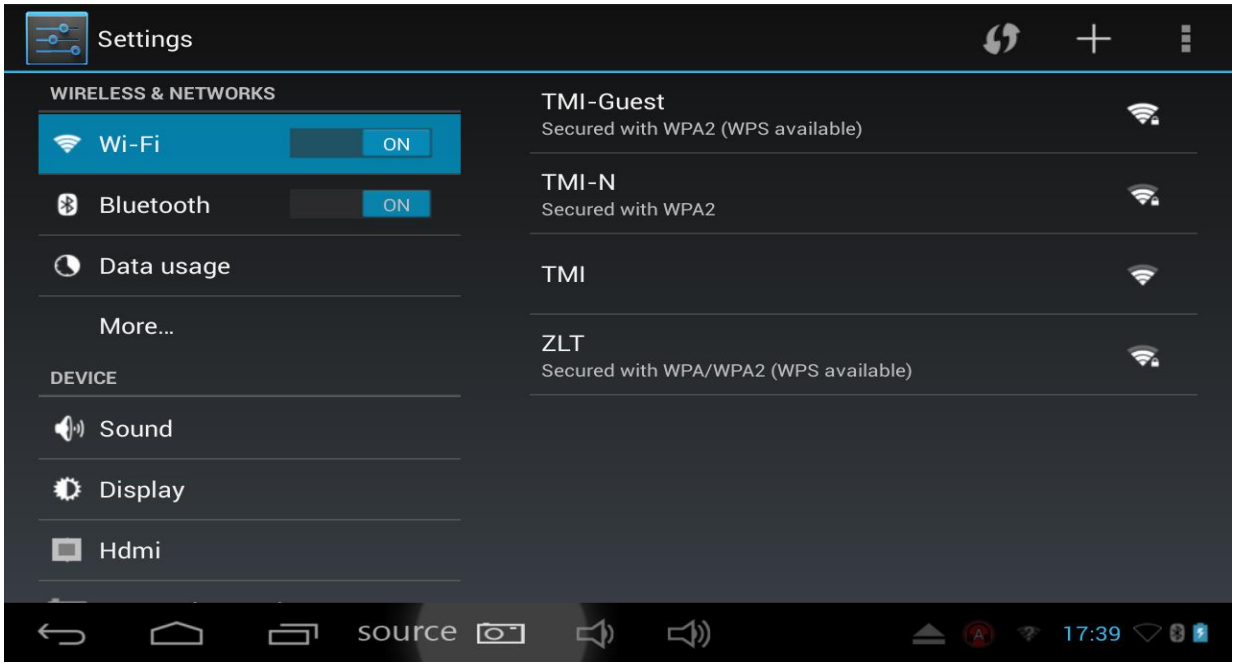

Wi-Fi

You can access the Internet when connected to a wireless connection.

The Wi-Fi must be turned on to access the internet.

Slide the Highlighted from OFF to ON if the Wi-Fi is turned OFF.

Find the name of your Wi-Fi connection.

Once your Wi-Fi has been located enter your password to connect.

Note: 4G Wi-Fi connection is recommended for steaming movies or gaming.

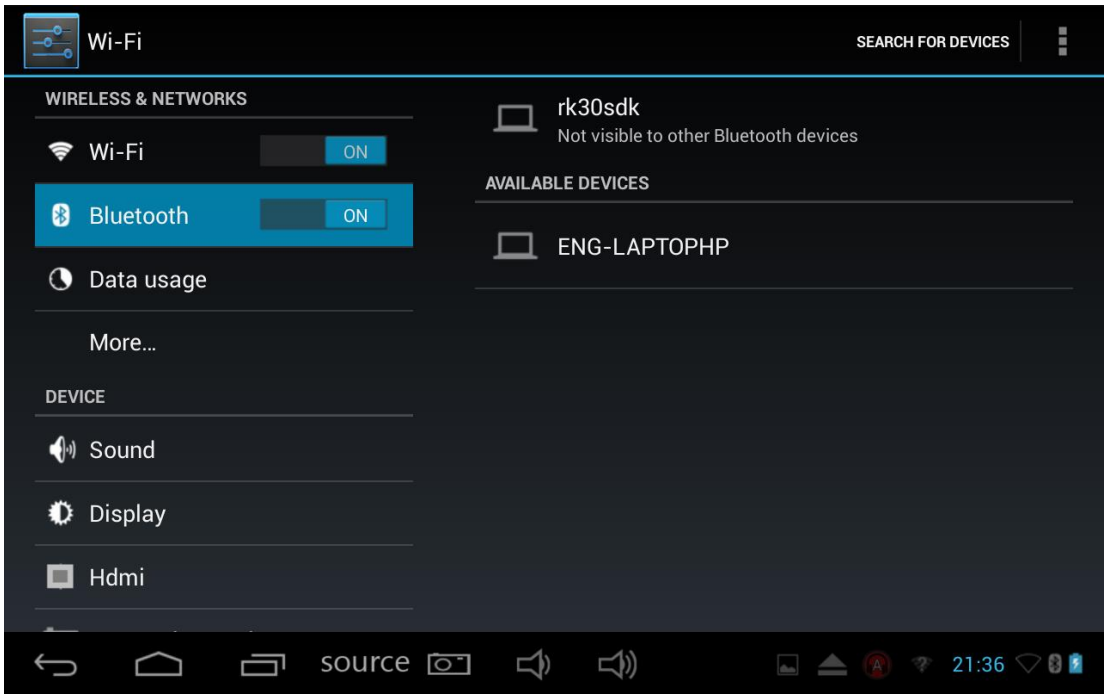

Bluetooth

The Bluetooth needs to be turned On in order to connect your Bluetooth device. To turn On the Bluetooth, slide the Highlighted Bluetooth from Off to On. Touch the Search for Devices and wait until you see your device. If your device does not show up make sure your device is in discoverable mode. (You can find the instructions for this in the Bluetooth's Device user manual). **Note: When pairing to a vehicles factory Bluetooth it is sometimes easier to put the factory radio in discoverable mode and pair from the tablet, a pass code is usually required.**

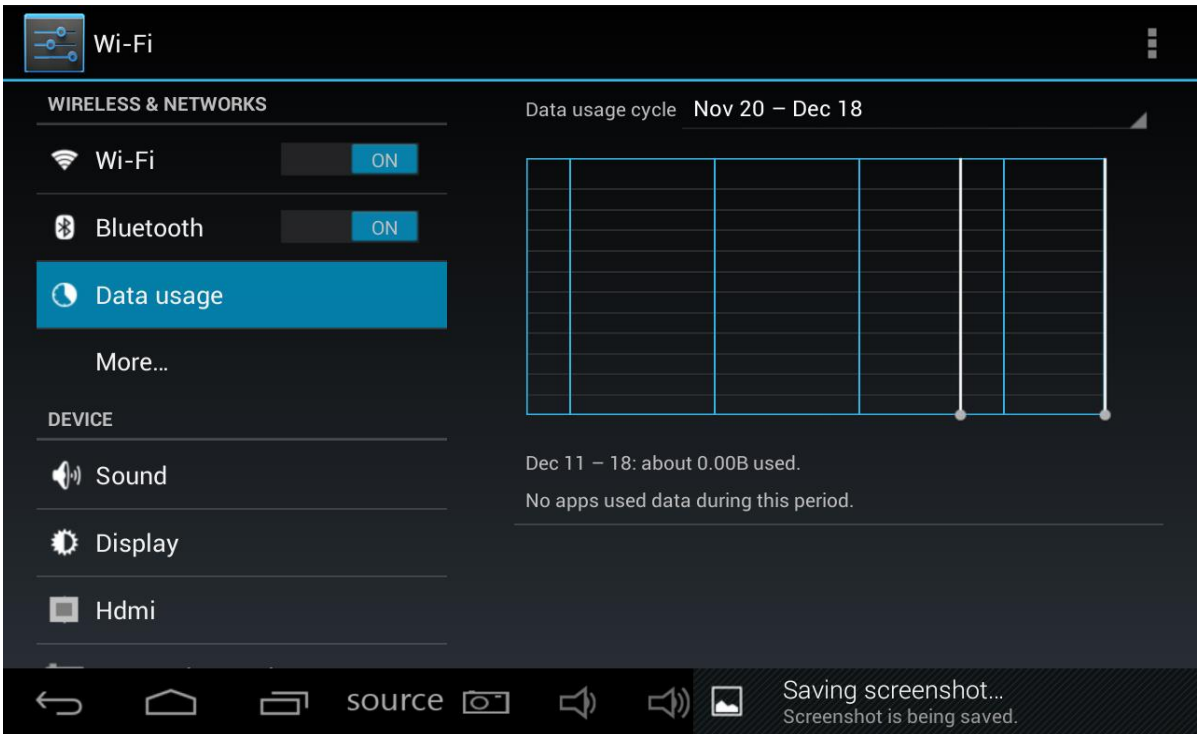

Data Usage

Data Usage Cycle: This will keep track of your apps used until the Tablets data is cleared.

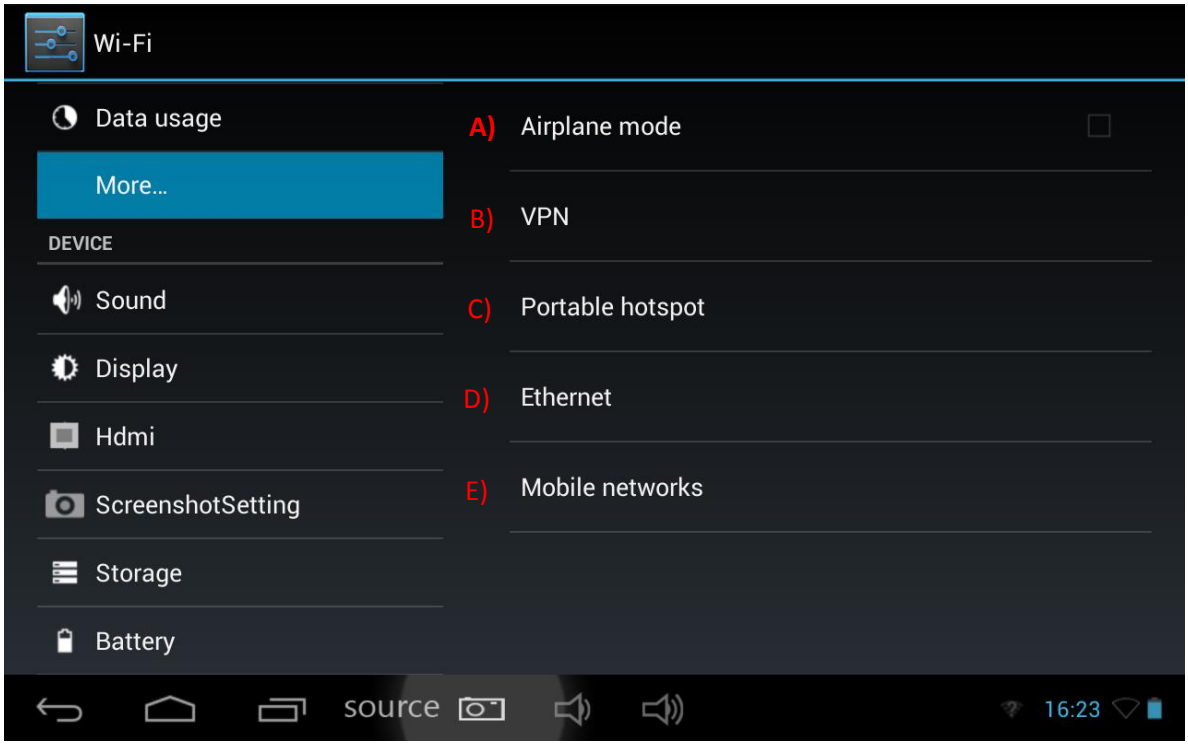

More Options More...

A. Airplane Mode - When you turn ON this feature, it shuts off any data being sent or received from the tablet. **Note: Tablet does not have any built in data service.**

B. VPN - virtual private network extends a private network across a public network, such as the Internet. It enables a computer or Wi-Fi-enabled device to send and receive data across shared or public networks as if it were directly connected to the private network, while benefiting from the functionality, security and management policies of the private network.

C. Portable Hotspot – This feature allows this device to serve as a link between nearby Wi-Fi devices and a cellular data networks.

D. Ethernet – This feature is used to connect computers in a company or home network as well as to connect a single computer to a cable modem or DSL modem for Internet access.

E. Mobile Networks – This feature is a wireless network distributed over land areas called cells, each served by at least one fixed-location transceiver, known as a cell site or base station.

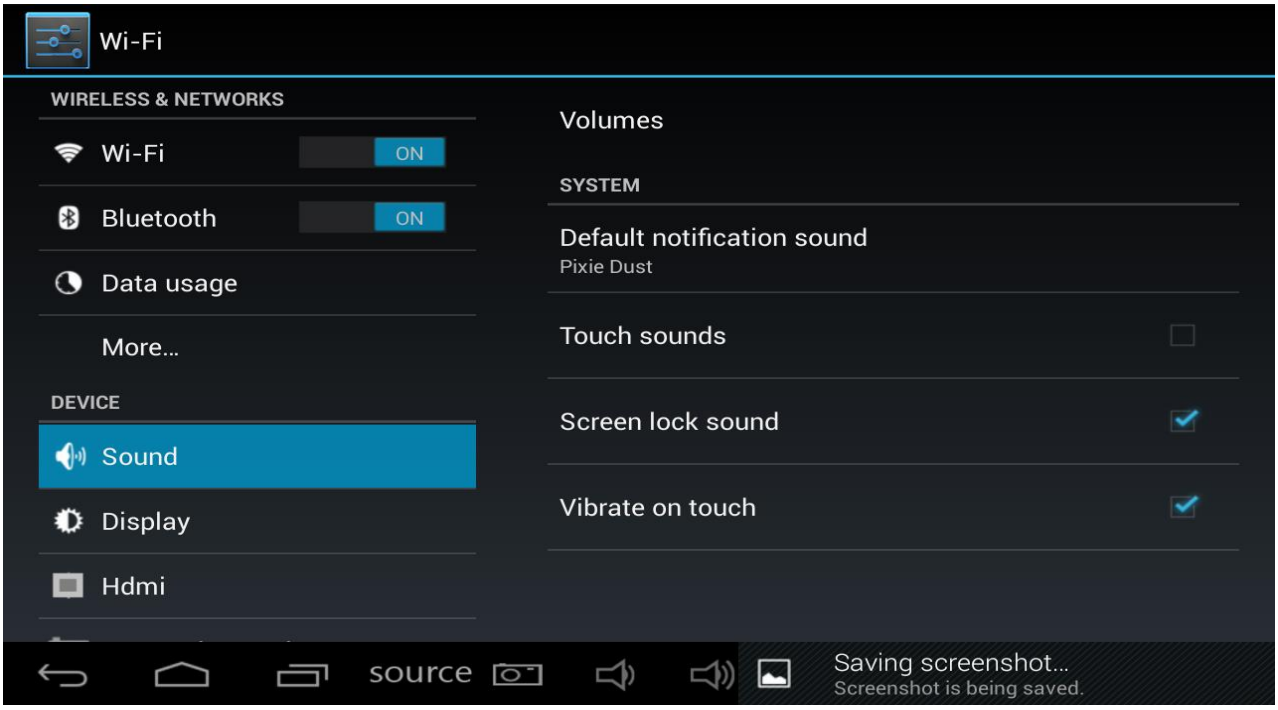

Sound 

This feature allows you to adjust the volume on music, video, games, notifications & alarms.

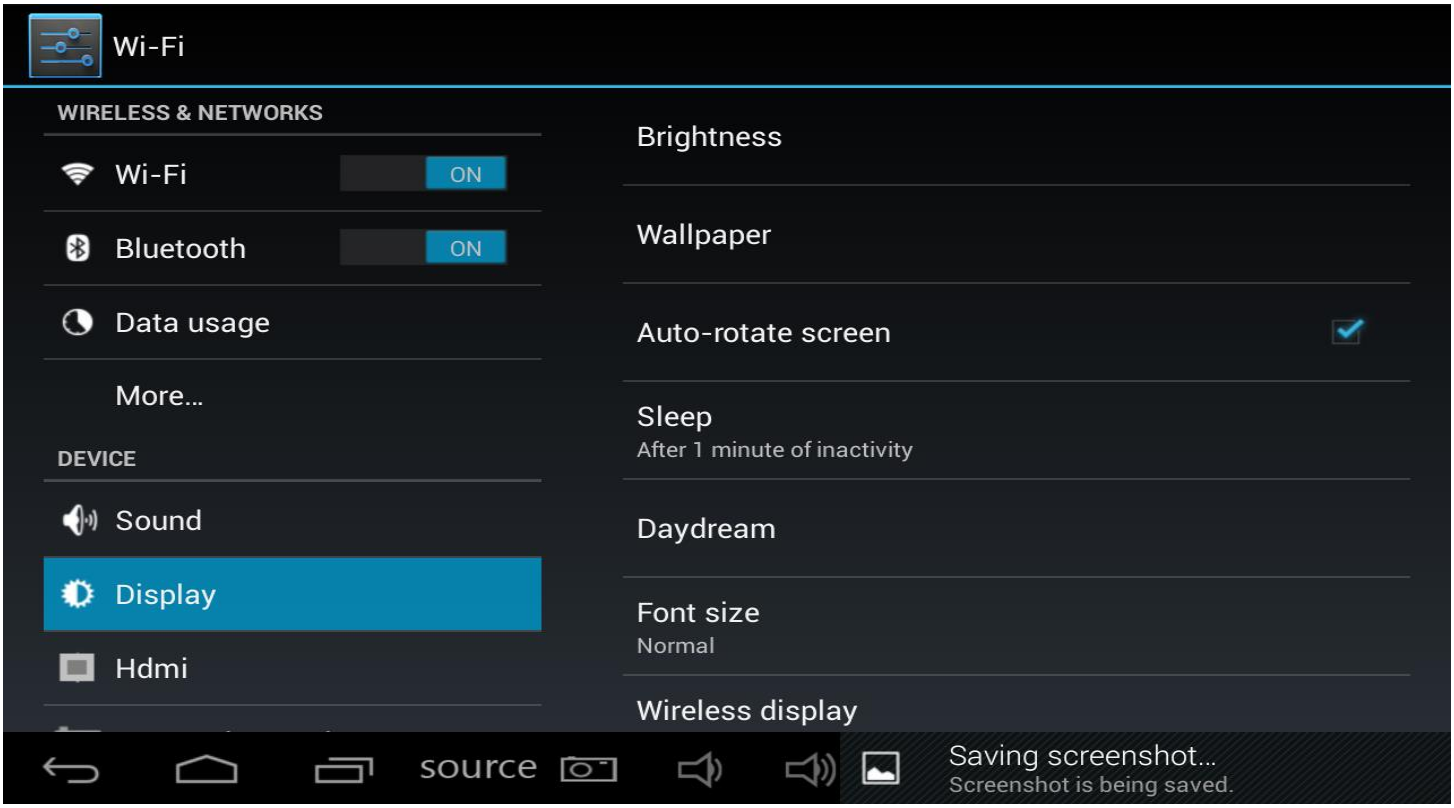

Display 

This feature allows you to adjust the brightness, font size or auto-rotate screen on the Tablet.

Sleep mode allows you to adjust the time it takes for the Tablet to shut down when you turn off your vehicle. The Sleep setting ranges from 15 seconds to 30 minutes. **Note: The default factory setting is set to 1 minute.**

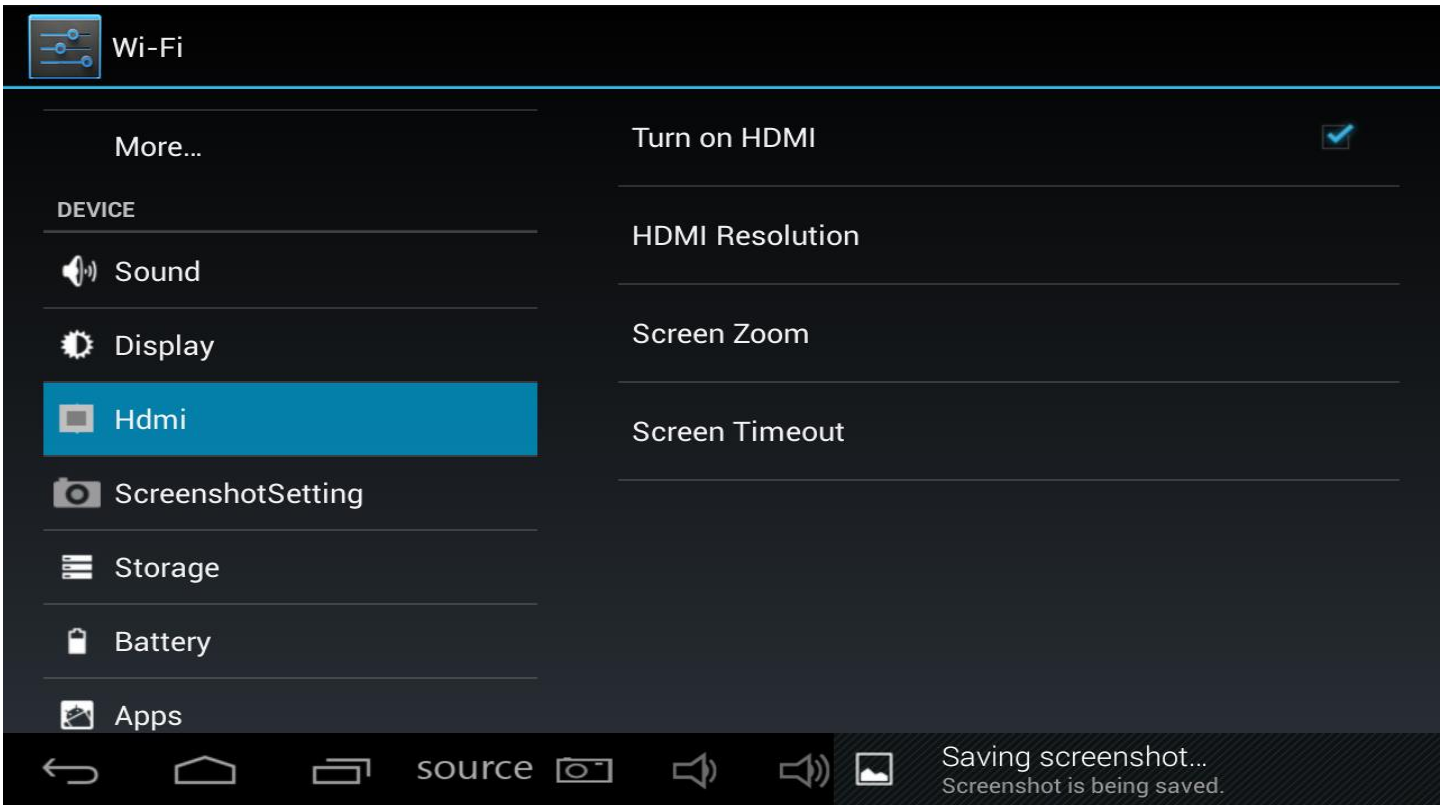

HDMI Output 

(High-Definition Multimedia Interface) is a *digital interface for audio and video that provides a single-cable solution for home theater and* consumer electronics equipment such as TVs, Blu-ray players and set-top boxes.

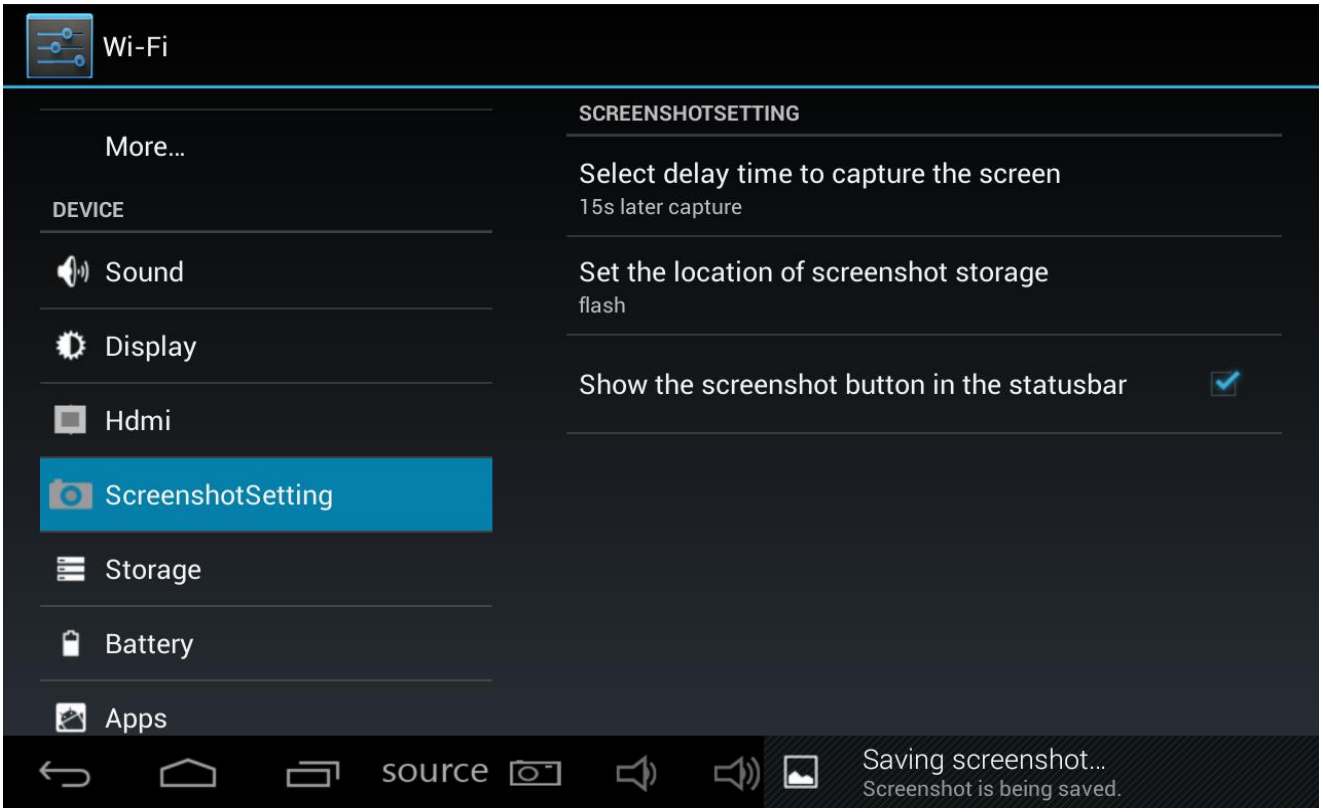

Screen Shot ScreenshotSetting

A screen shot (sometimes called a screen capture) is an image of a computer desktop that can be saved as a graphics file.

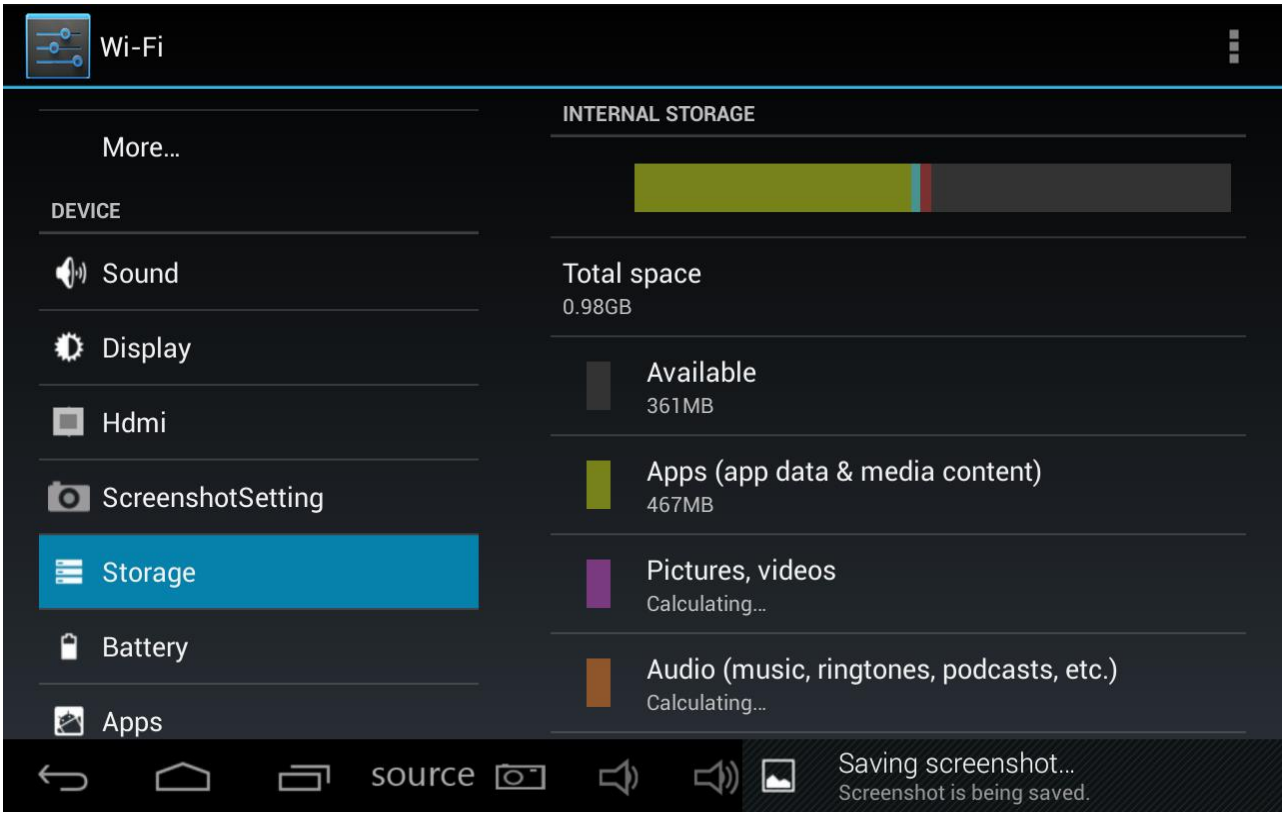

Storage 

This feature is the Tablets internal storage space. You can monitor how much memory is remaining on your Tablet.

This feature also allows you to clear your SD card without removing it from the Tablet.

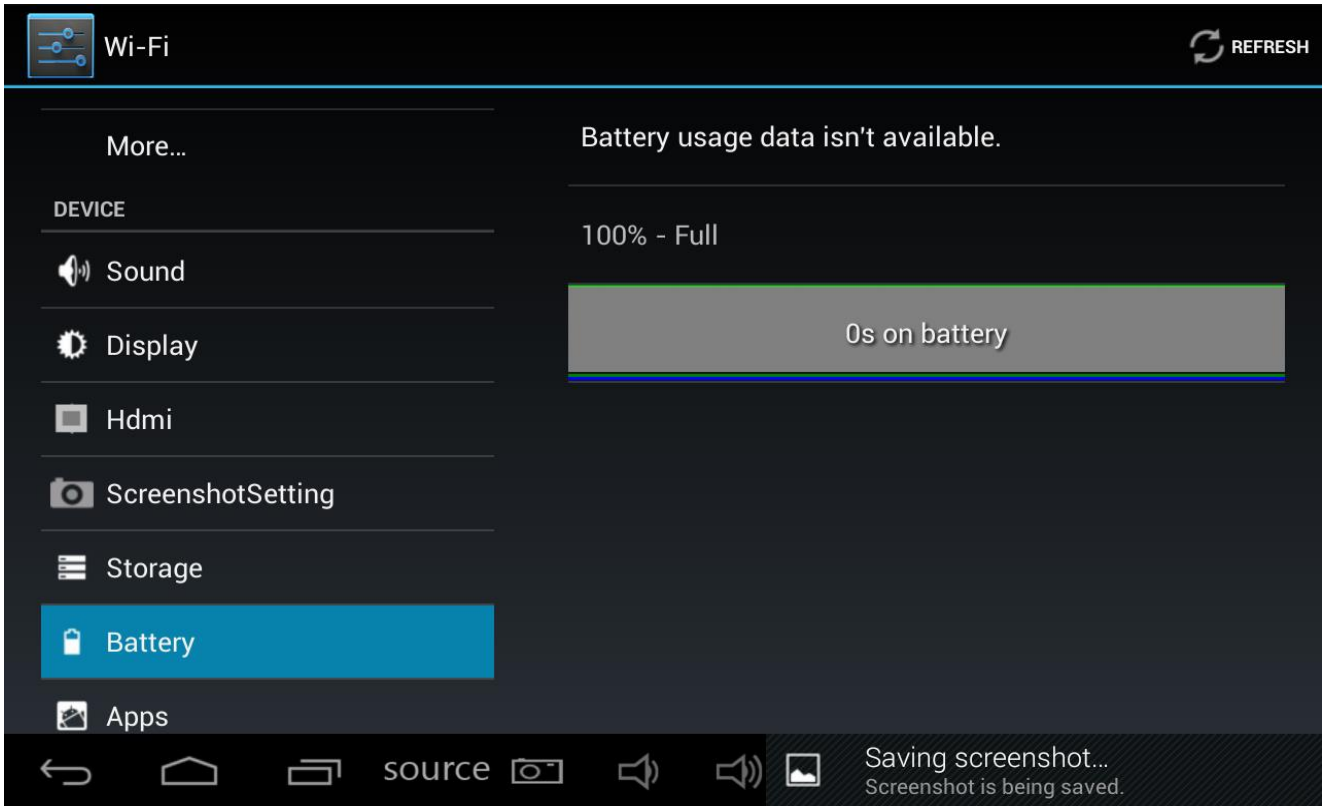

Battery

This feature allows you to monitor the Battery life of the Tablet. The Battery life of the tablet fluctuates depending on the use of Wi-Fi, Bluetooth etc…

Note: The Tablet can be charged in the headrest docking station or the supplied home charger.

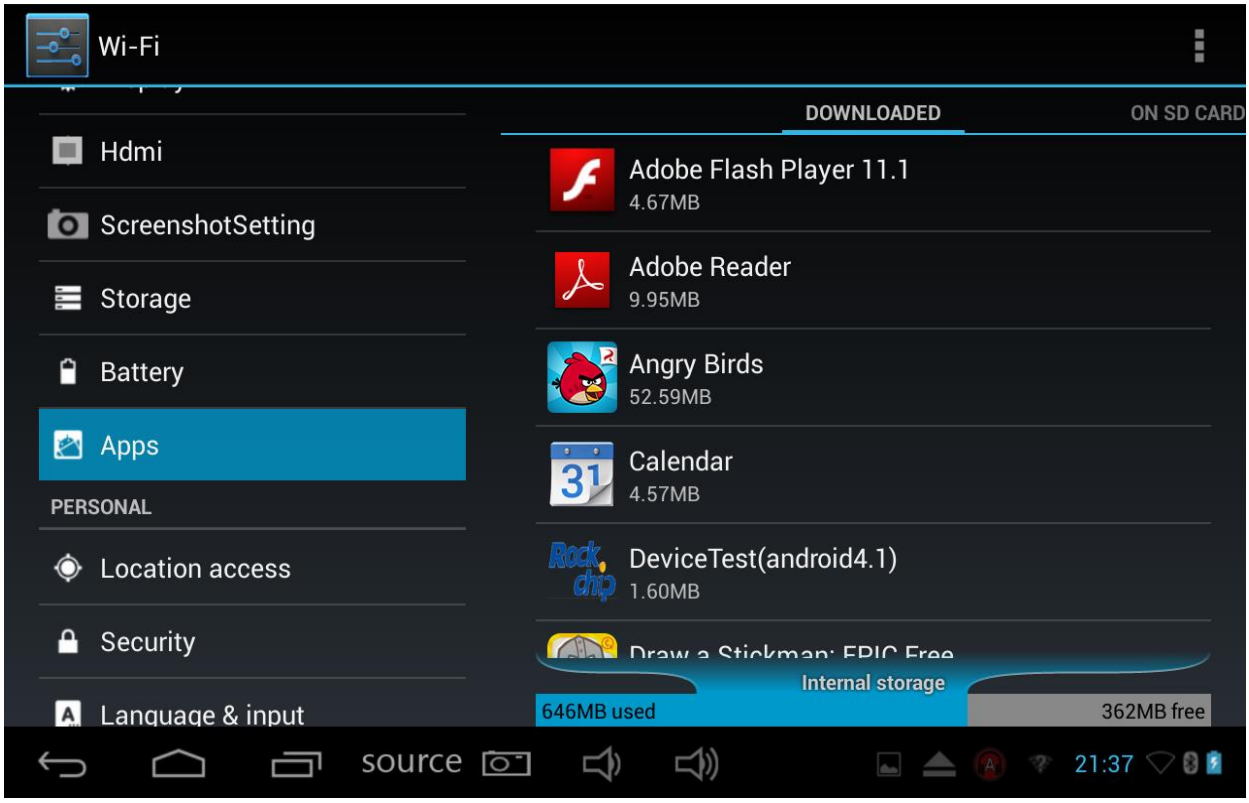

Apps 

This feature displays the Apps downloaded & what Apps are running on the Tablet.

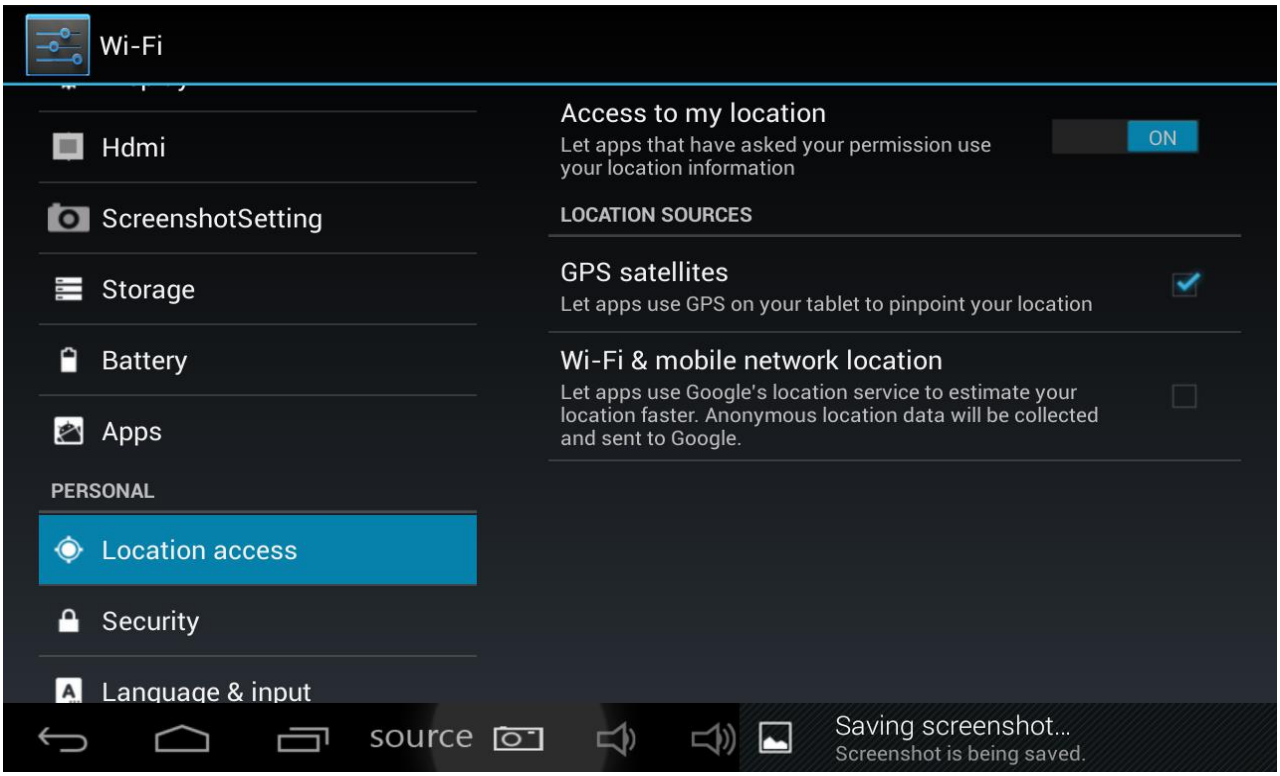

Location Access 

Allows apps that have asked your permission use your location information.

This feature uses GPS to pinpoint your location.

Note: This device is not equipped with GPS.

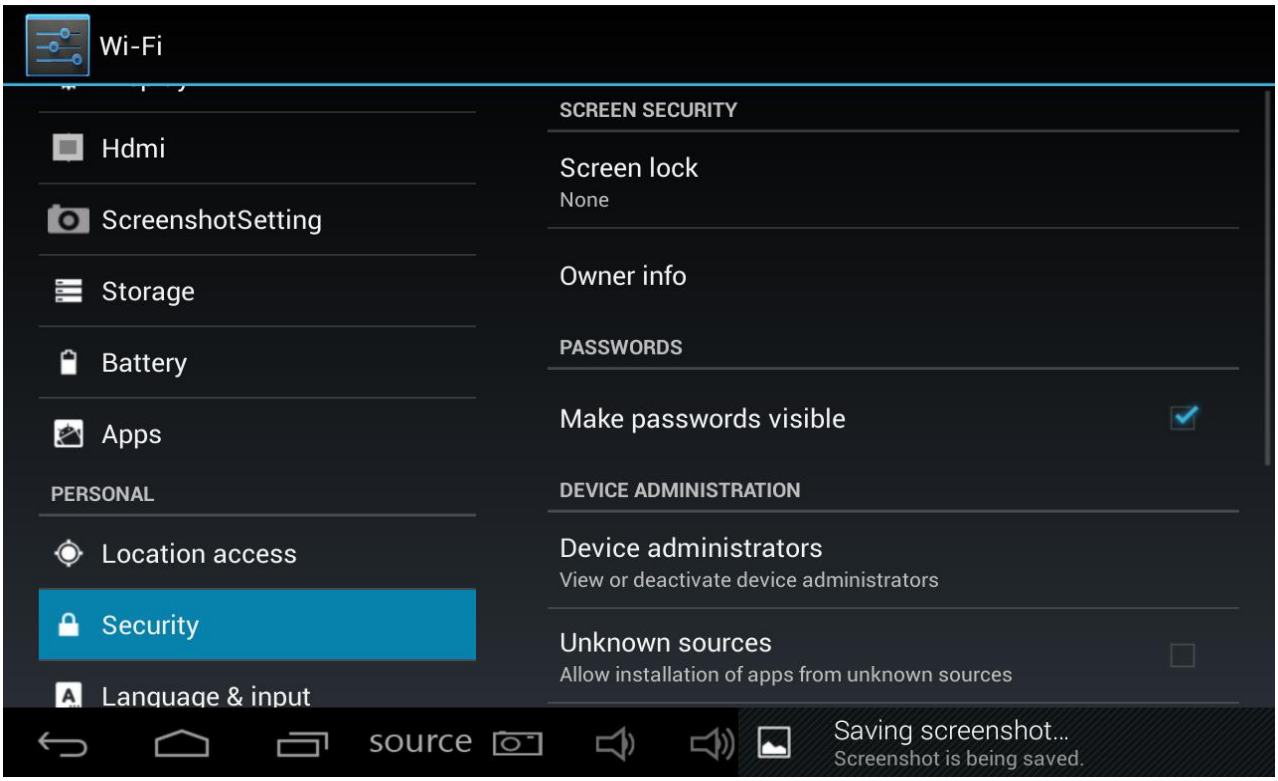

Security

This feature allows you to Screen Lock/Unlock your Tablet through a Password, Slide button, Pattern or Face recognition.

Unknown Sources - allows installation of apps or updates from unknown sources. For example, our game controller app requires you to check mark this feature to allow the app to install.

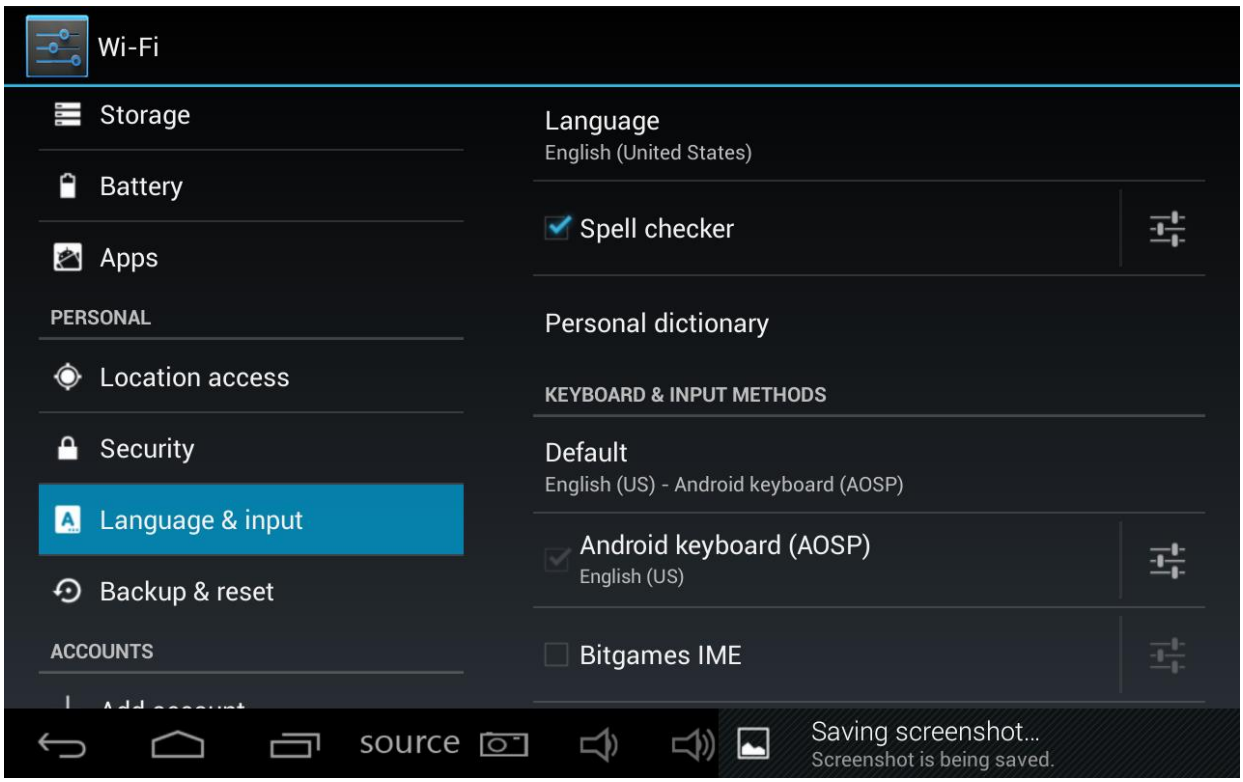

Language & Input 

This feature allows you to change the language setting on the Tablet.

The Personal Dictionary allows you to add your own lingo or dialect to the Tablet.

The Bitgames IME input setting is designed for the SmartLogic Bluetooth game controller. **Note: Refer to the game controller pairing manual.**

In the Speech settings you can change the language or block offensive language when you perform text to speech on the Tablet.

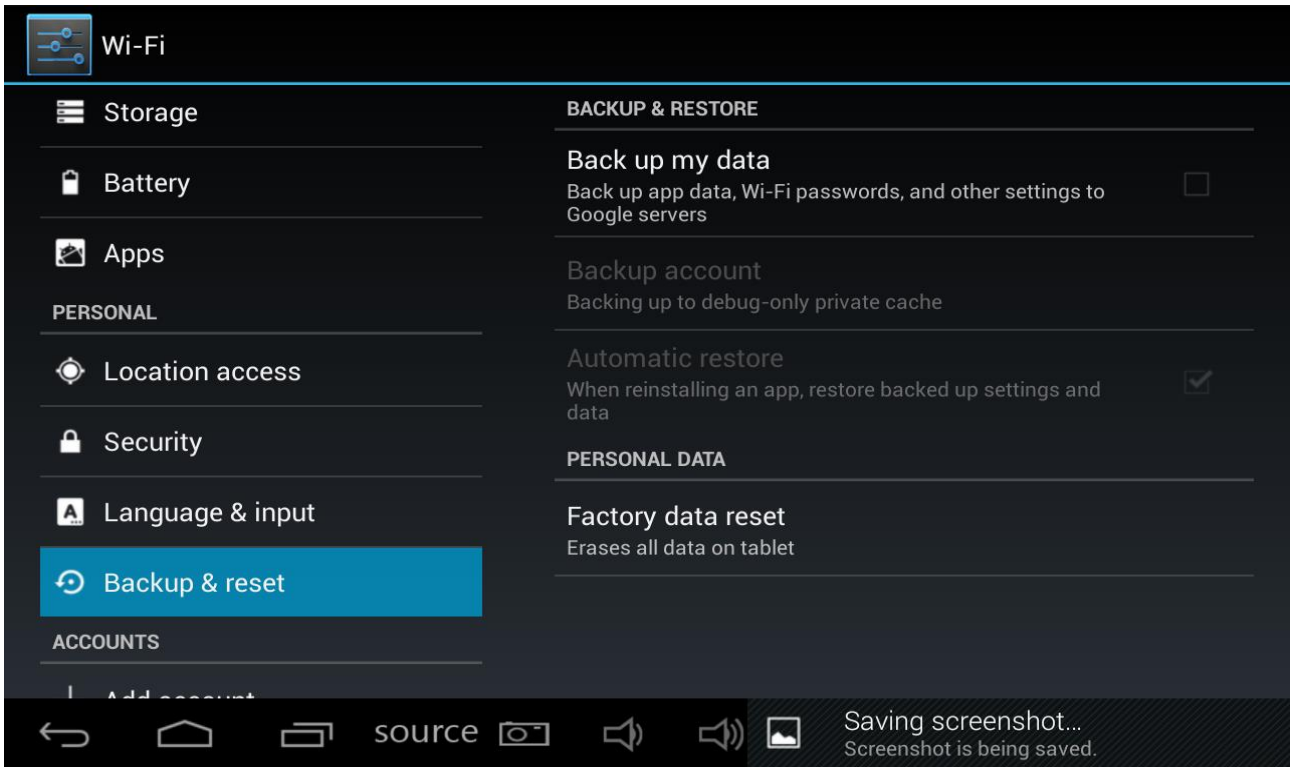

Backup & Reset

This feature allows you to backup app data, Wi-Fi passwords and other settings to Google server.

The Factory Data Reset allows you to erase all data on the Tablet.

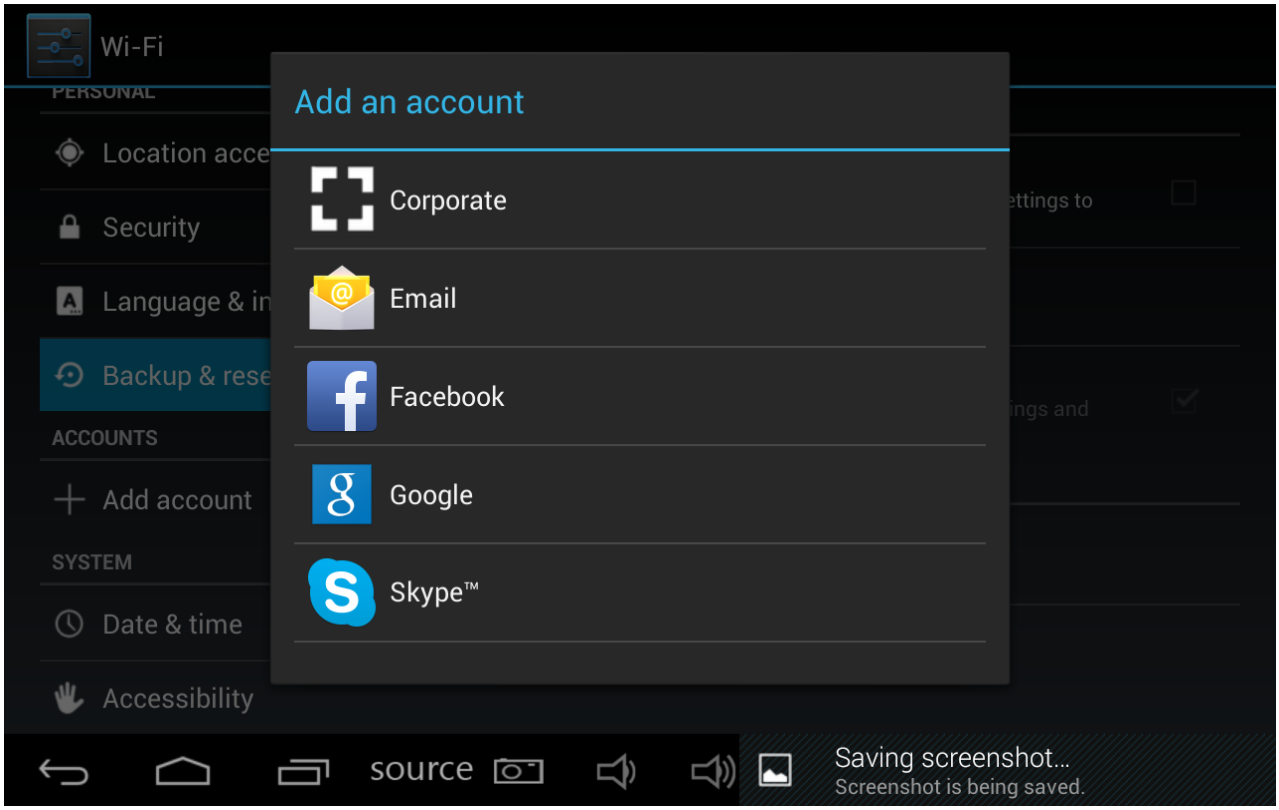

Add Accounts



This feature allows you to add your Facebook, Google or Skype accounts on to your Tablet. You can also add your Gmail account to access Google PlayStore for movie or game downloads. **Note: A Gmail account is recommended for SmartDVD updates.**

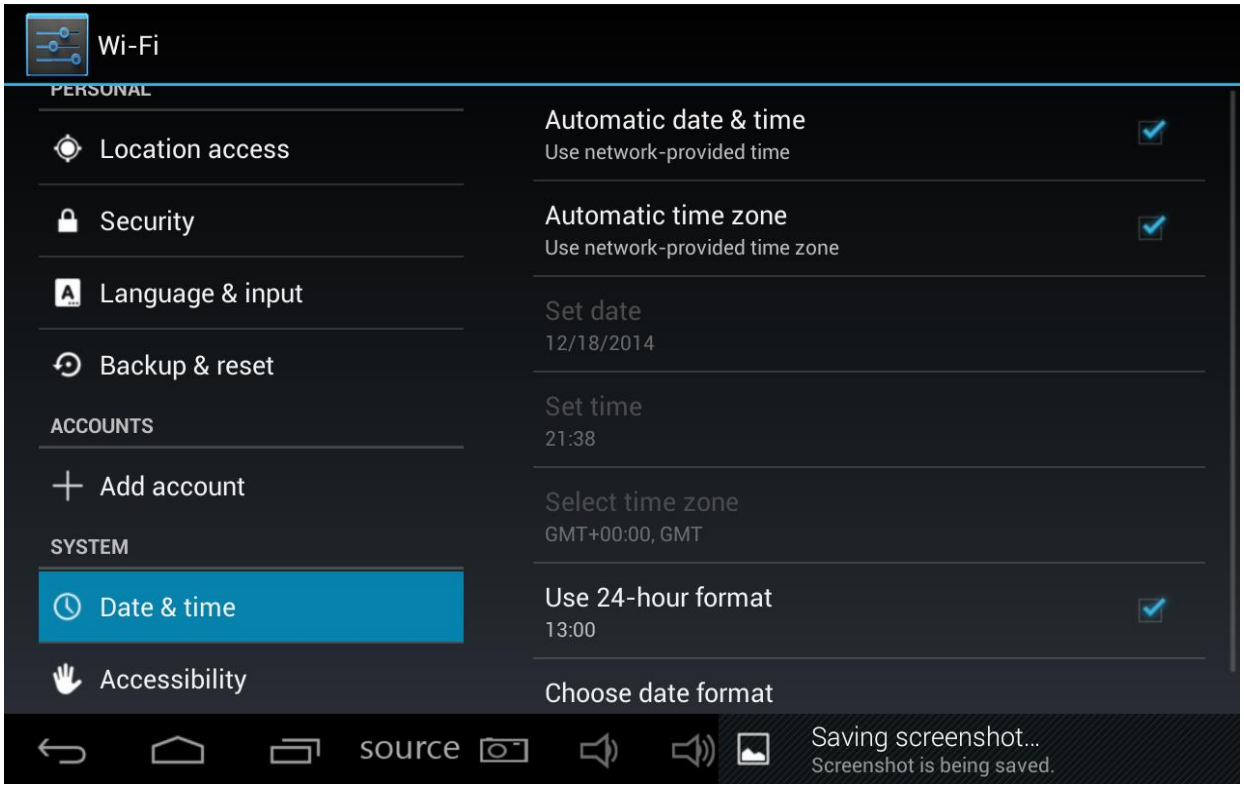

Date & Time 

This feature allows you to change Date and Time settings on the tablet. You can also change the time and date format.

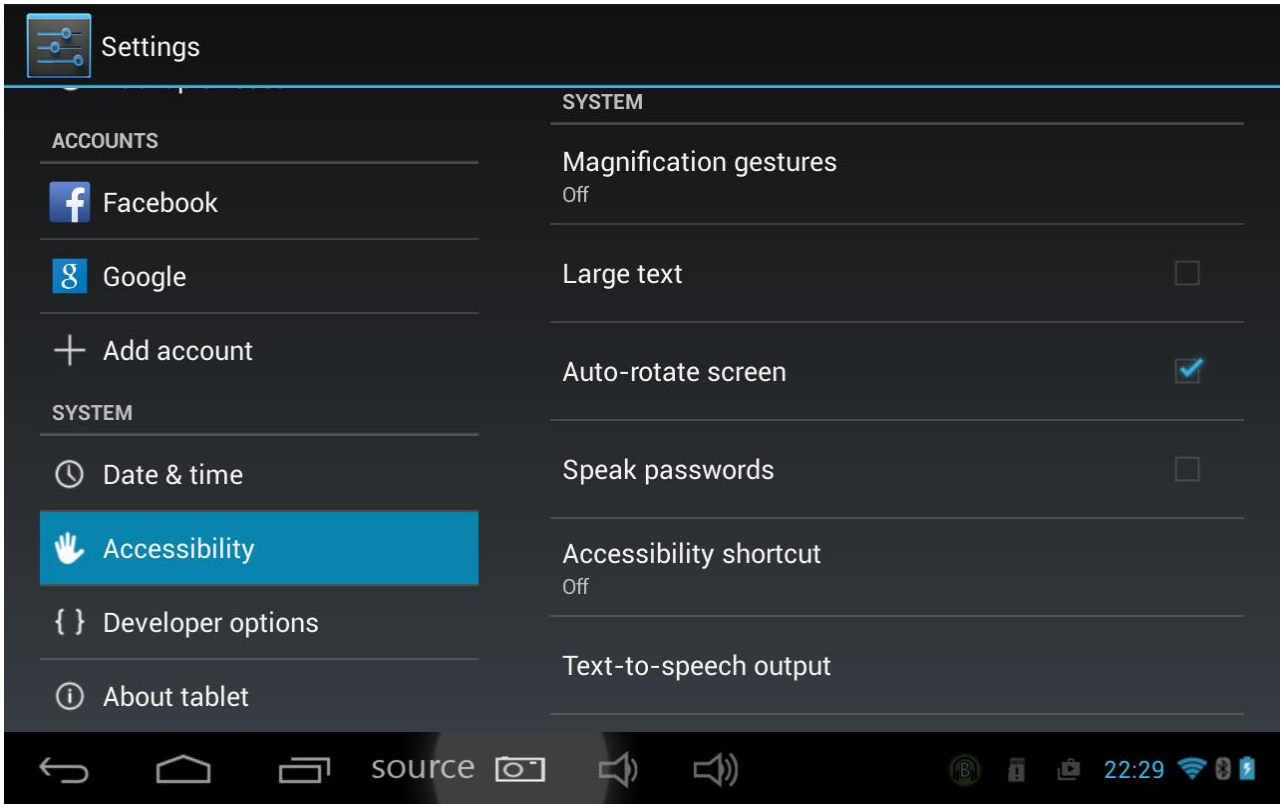

Accessibility 

This feature allows you to enlarge the text, turn on/off auto rotate screen or change text to speech output on the Tablet.

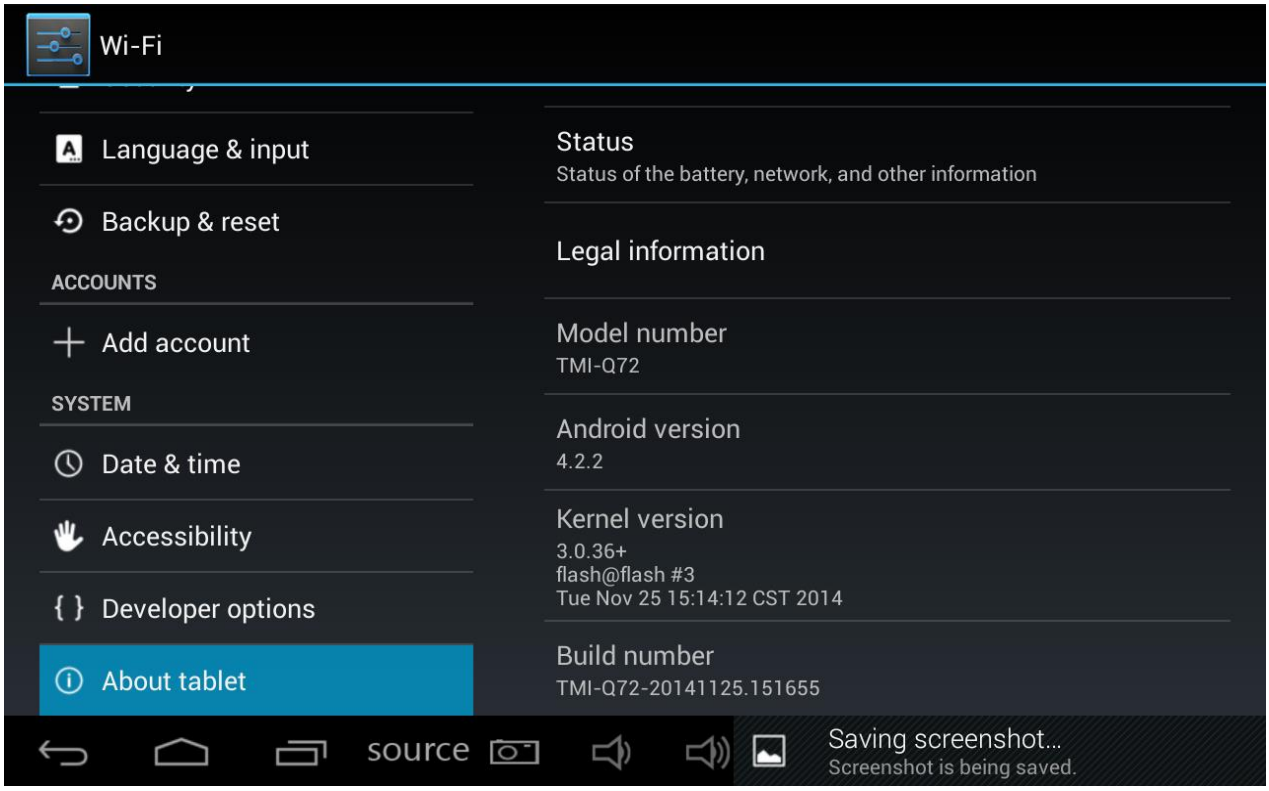

About Tablet 

This feature provides information about the Tablet. For example, you can check the status of the Tablet's battery life or Android version the Tablet is curently running.

4. ***SmartDVD App***

This app is designed to play your DVD movie on the SmartLogic Tablet.

Load your DVD movie into the DVD Rom on the Headrest and press the SmartDVD app. **Note: When loading the DVD, push the DVD in until the DVD Rom accepts the DVD. It is recommended to use a store bought DVD.**

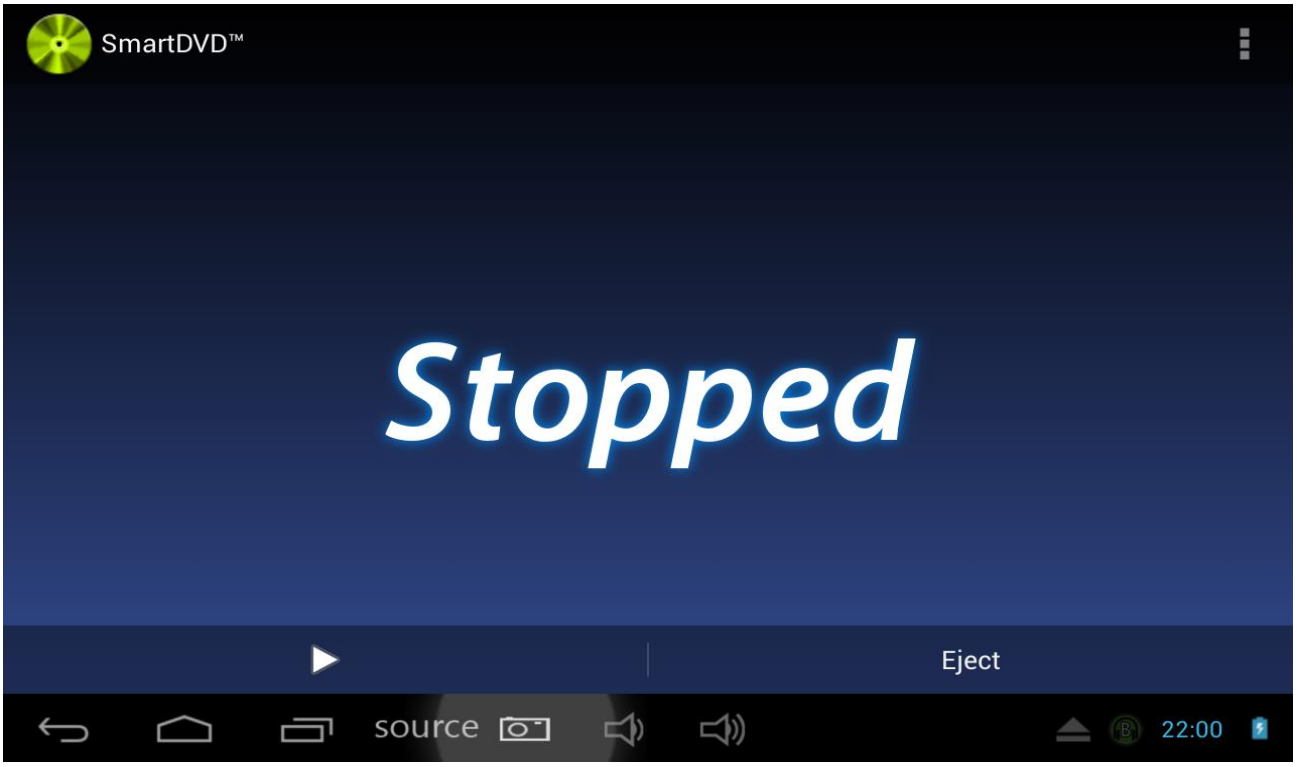

When you open the Smart DVD app, it will display the Stopped screen. From here, you can choose to Play or Eject the DVD. **Note: The DVD movie must be stopped before you can Eject the DVD.**

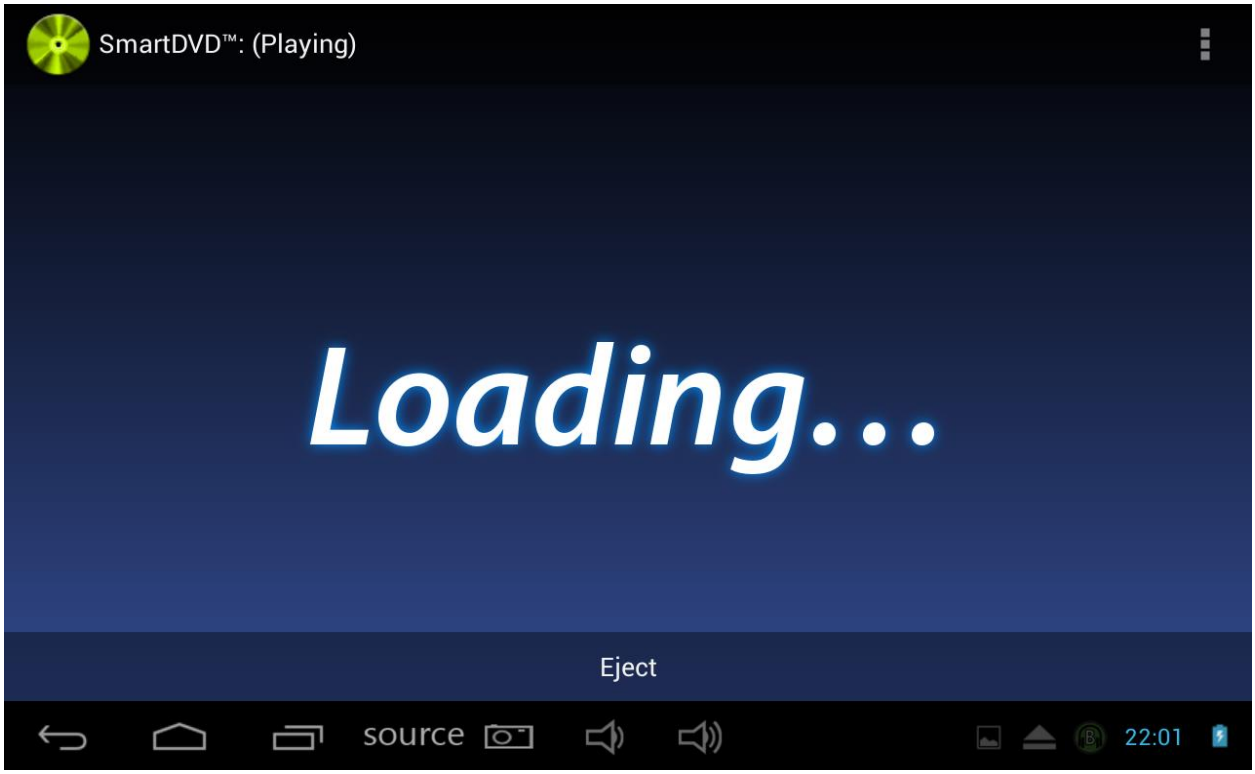

Operating SmartDVD:

When you press Play, the Loading screen will display. In some cases, it might take a few seconds to read the DVD disc.

When the DVD movie starts to Play you can control the functions of the DVD. Tap the screen to display the function bar on the bottom of the screen. From here you are able to stop the movie, playback or move the movie Backwards or Forwards. There is also a Slide bar to navigate the movie to the desired track.

The DVD menu is located on the top right of the screen. Once you open the DVD menu, you can choose from Scene Selection, Bonus Features, Setup, etc…

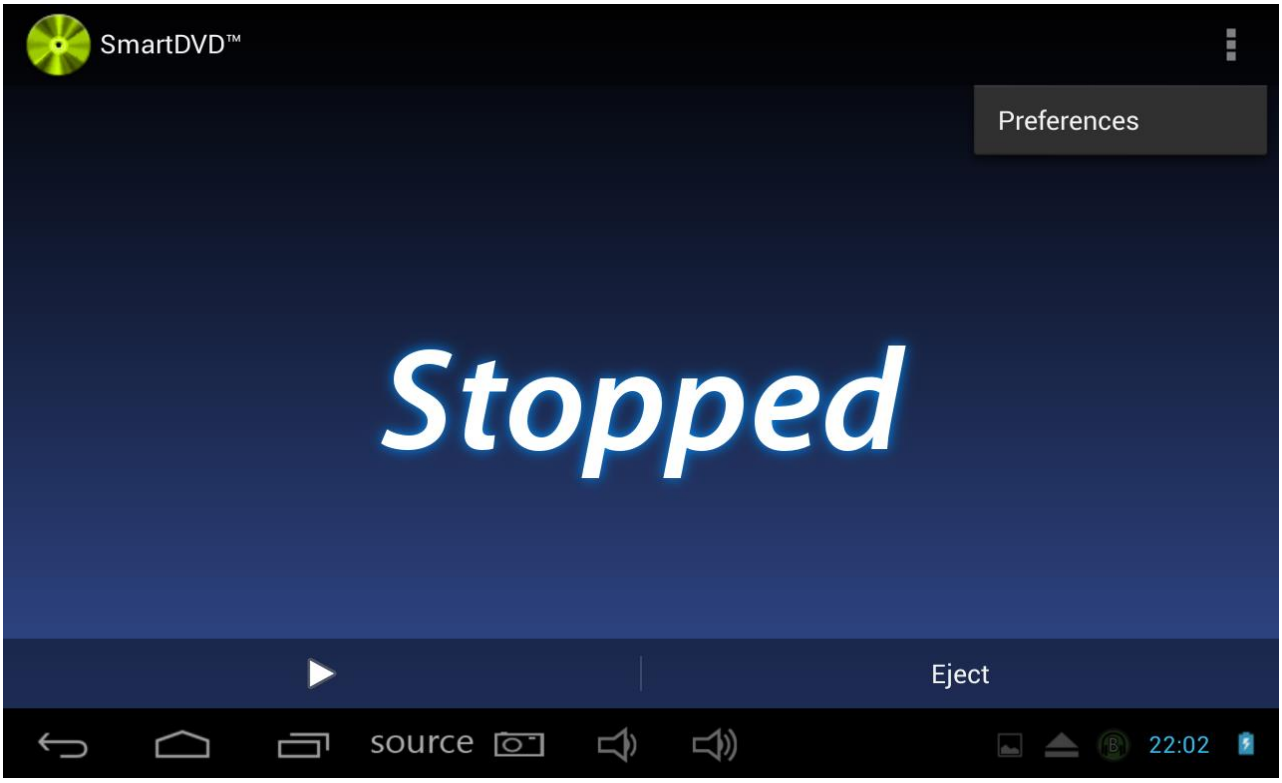

Preference Settings

The SmartDVD Preference Icon is located on the upper right hand corner of the Stopped screen (The 3 small Squares) Tap the Preference Icon to open this feature.

Here you can change the Smart DVD settings to fit your DVD movie watching experience.

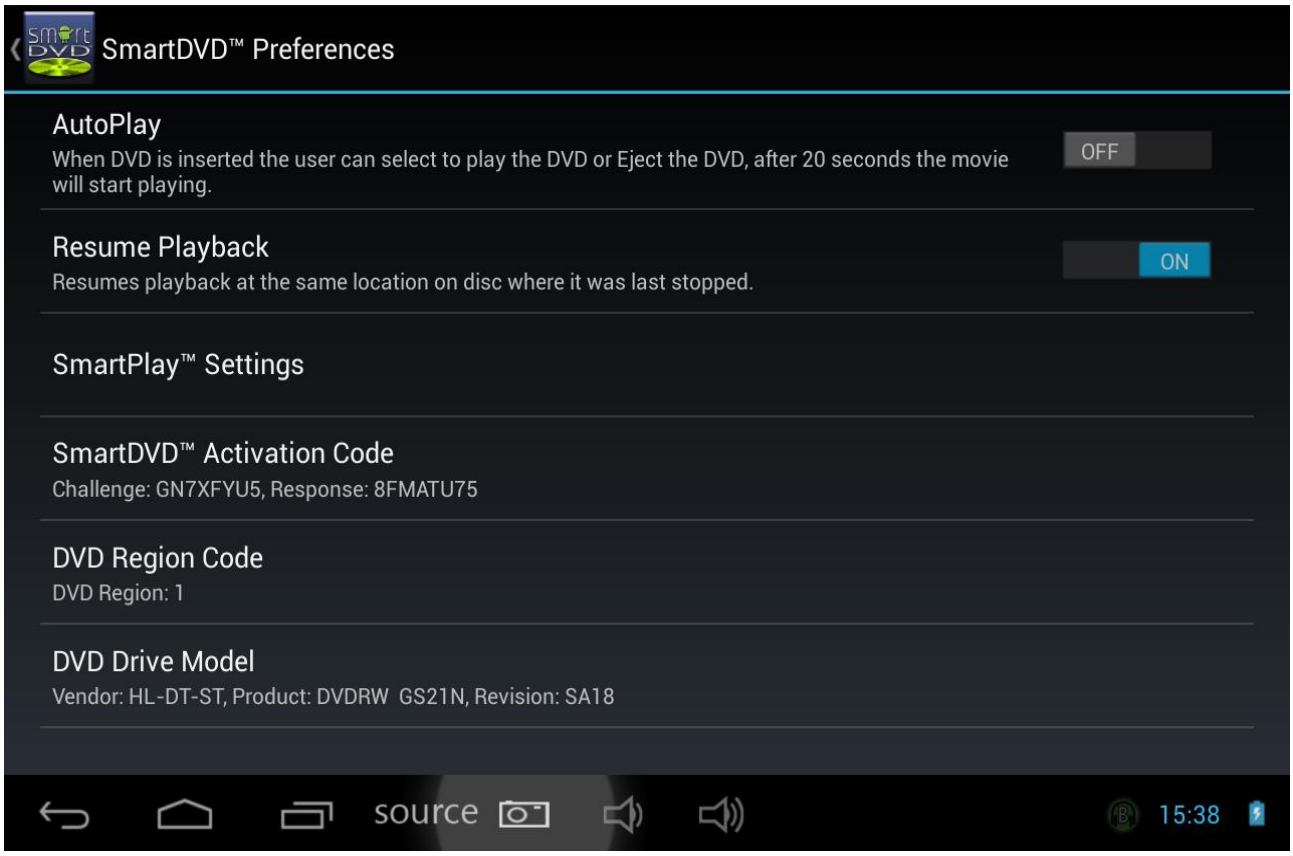
SmartDVD™ Preferences
AutoPlay
When DVD is inserted the user can select to play the DVD or Eject the DVD, after 20 seconds the movie will start playing.
OFF
Resume Playback
Resumes playback at the same location on disc where it was last stopped.
ON
SmartPlay™ Settings
SmartDVD™ Activation Code
Challenge: GN7XFYU5, Response: 8FMATU75
DVD Region Code
DVD Region: 1
DVD Drive Model
Vendor: HL-DT-ST, Product: DVDRW GS21N, Revision: SA18
source
15:38

AutoPlay – When turned ON, this feature allows the DVD to play automatically after 20 seconds.

Resume Playback - When turned ON, this feature will play the DVD movie at the same location where it was last stopped.

SmartPlay Settings:
When turned ON, this feature will skip the DVD trailers & DVD menu. The DVD movie will automatically play the longest movie feature.

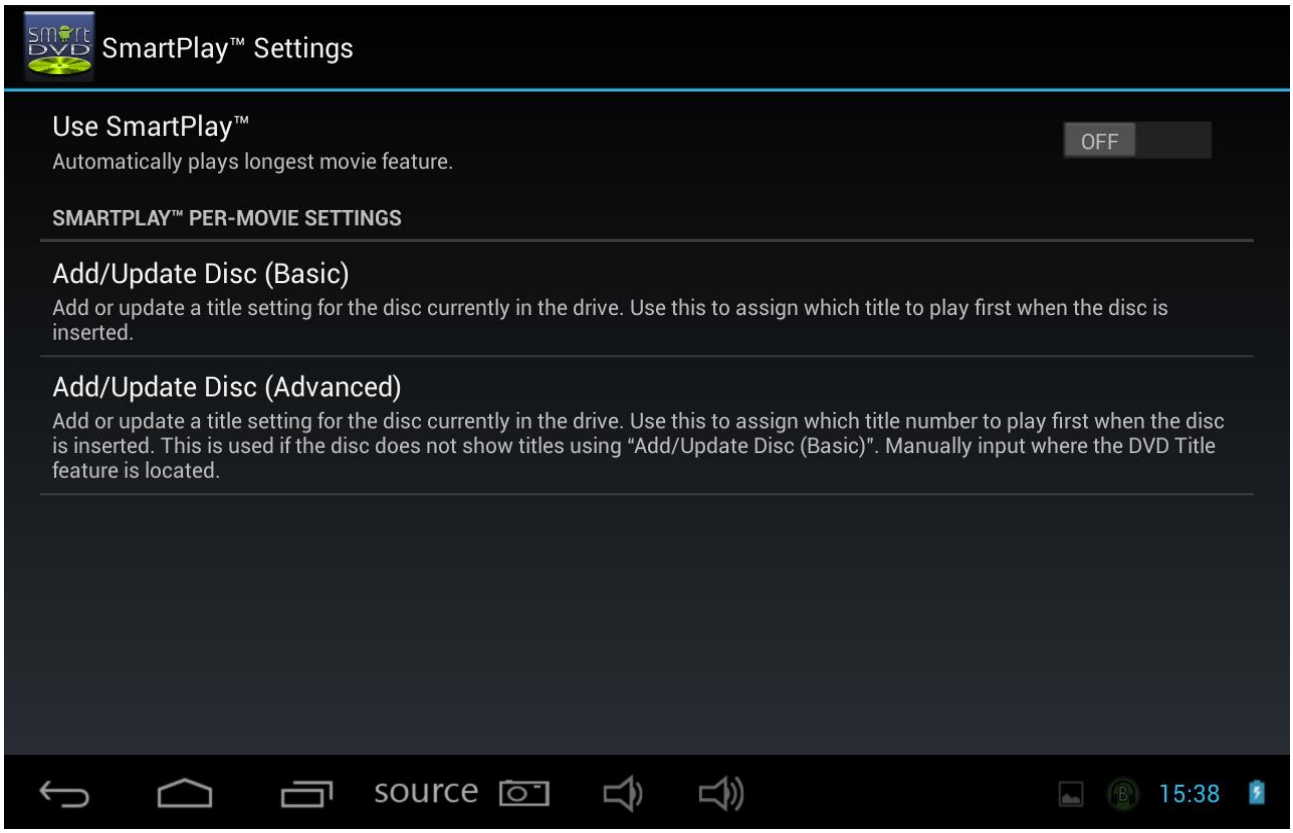
SmartPlay™ Settings
Use SmartPlay™
Automatically plays longest movie feature.
OFF
SMARTPLAY™ PER-MOVIE SETTINGS
Add/Update Disc (Basic)
Add or update a title setting for the disc currently in the drive. Use this to assign which title to play first when the disc is inserted.
Add/Update Disc (Advanced)
Add or update a title setting for the disc currently in the drive. Use this to assign which title number to play first when the disc is inserted. This is used if the disc does not show titles using "Add/Update Disc (Basic)". Manually input where the DVD Title feature is located.
source
15:38

Add/Update Disc (Basic) - When you select this feature, you should be presented with a list of titles that are on the disc. Each title will have different play-times to choose from. However, as stated before, there may be multiple titles that have the same amount of play-time.

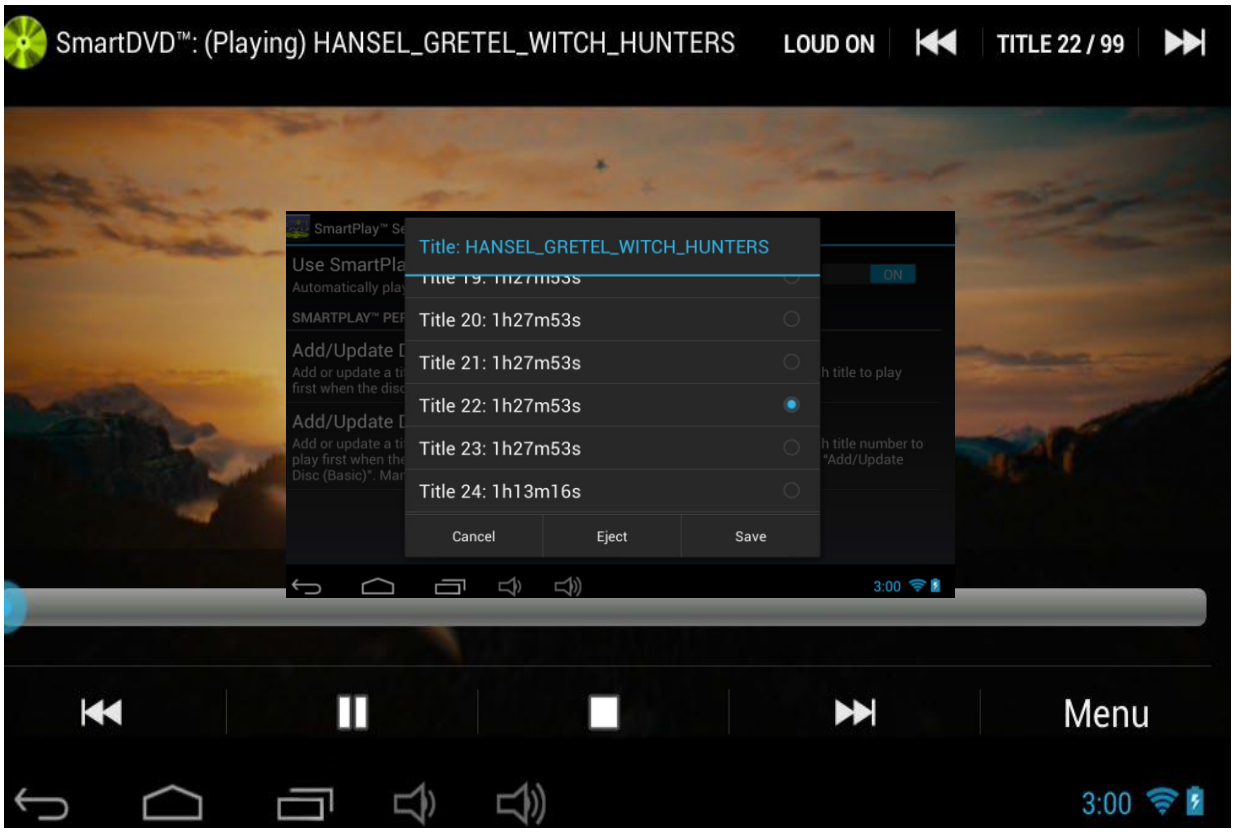

To know which title to choose from, you will have to first go to the DVD's menu and go to "Play".
Once the movie starts to play, look towards the top right corner between the PREVIOUS and NEXT buttons. You will see "TITLE --/99". Take note of which title number is being played. For example, in the movie, "Hansel & Gretel: Witch Hunters", the main title number is "TITLE 22/99" (Title number 22 out of 99). Now you can go back to the title selection menu from SmartPlay™ Settings and set it as "Title 22".

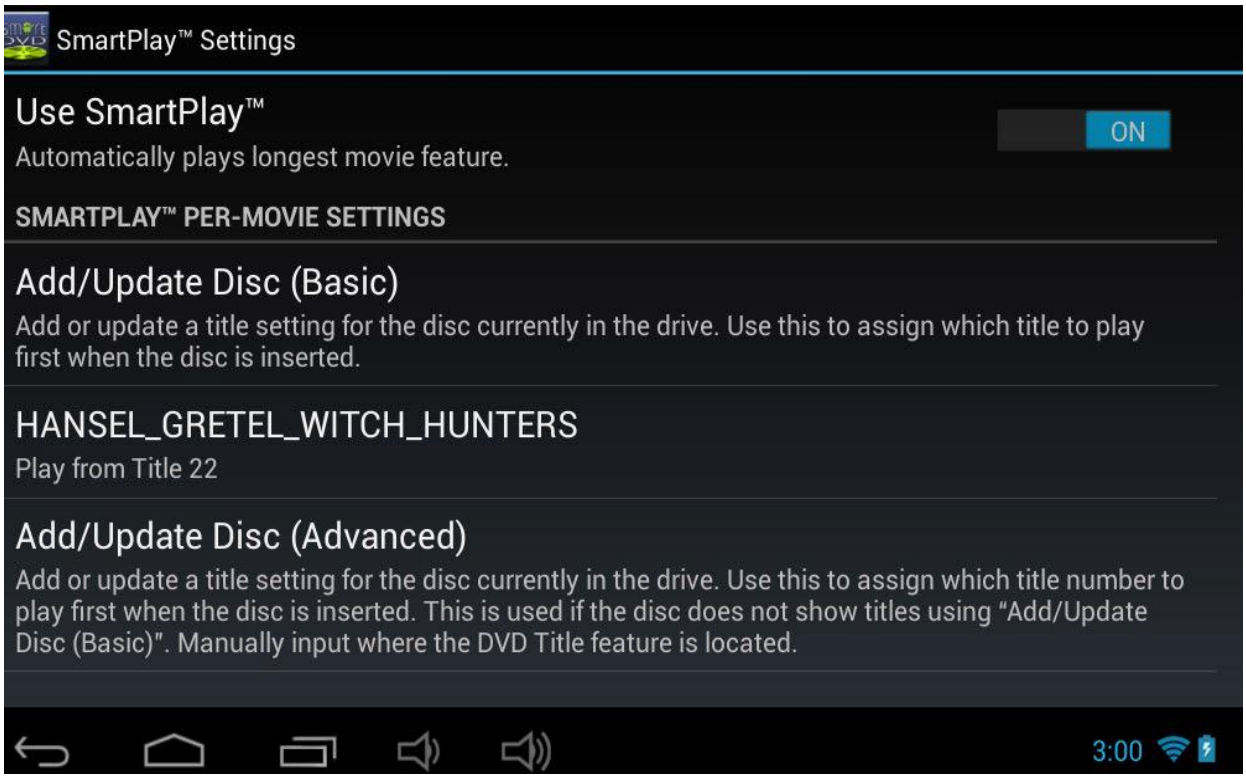
SmartPlay™ Settings
Use SmartPlay™
Automatically plays longest movie feature.
ON
SMARTPLAY™ PER-MOVIE SETTINGS
Add/Update Disc (Basic)
Add or update a title setting for the disc currently in the drive. Use this to assign which title to play first when the disc is inserted.
HANSEL_GRETEL_WITCH_HUNTERS
Play from Title 22
Add/Update Disc (Advanced)
Add or update a title setting for the disc currently in the drive. Use this to assign which title number to play first when the disc is inserted. This is used if the disc does not show titles using "Add/Update Disc (Basic)". Manually input where the DVD Title feature is located.
3:00

After you have selected which title you want to be played, it will now show in the SmartPlay™ Settings menu. If you want to change the title, you will have to select it and choose "Delete", then go back to "Add/Update Disc (Basic)" to select another title.

Add/Update Disc (Advanced) – When you select this feature, you can add or update a title setting for the disc currently in the drive just like (Basic). Use this option if "Add/Update Disc (Basic)" does not show titles in the selection menu.

To find titles and play-times if this occurs, you will need to load your DVD into a computer or any other device that will display which title number is being played. Once you have the title number, you can select it from the "Add/Update Disc (Advanced)" title list.

You can also check on our SmartLogic® Tablet website for an updated list of DVDs that may have this problem with the correct title number for your convenience.

Power

If the tablet is not docked or if there is no power to the DVD-ROM player, the screen will display a blacked out Car and USB/DVD.

Note: The DVD Rom, USB Drive and the Tablet charge will not work without power to the vehicle.

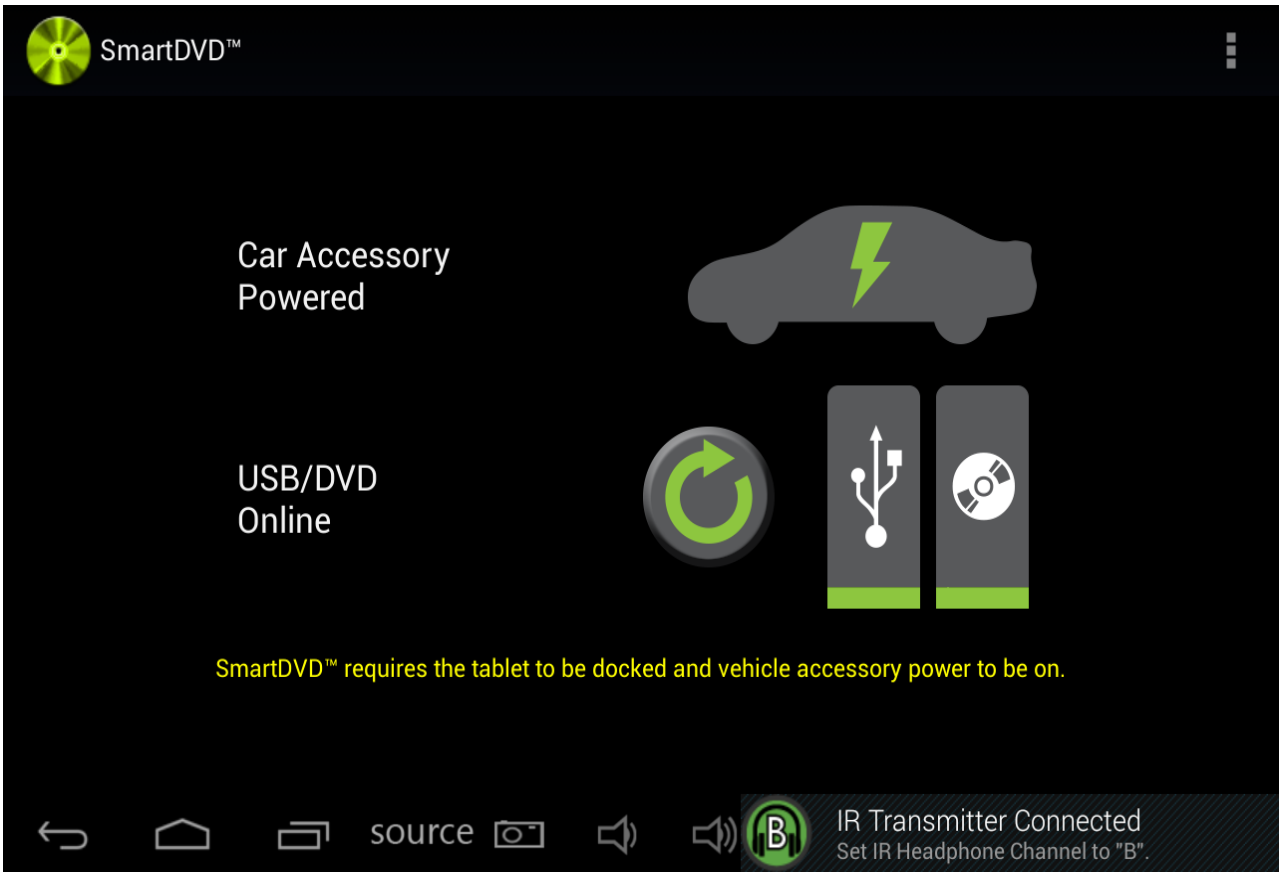

When the Tablet is docked with power, the Car and USB/DVD will light up. **Note: Sometimes the Tablet is not docked correctly if there is still no power. Push down on the top of the Tablet to insure proper dock.**

5. SmartLogic Automotive Settings

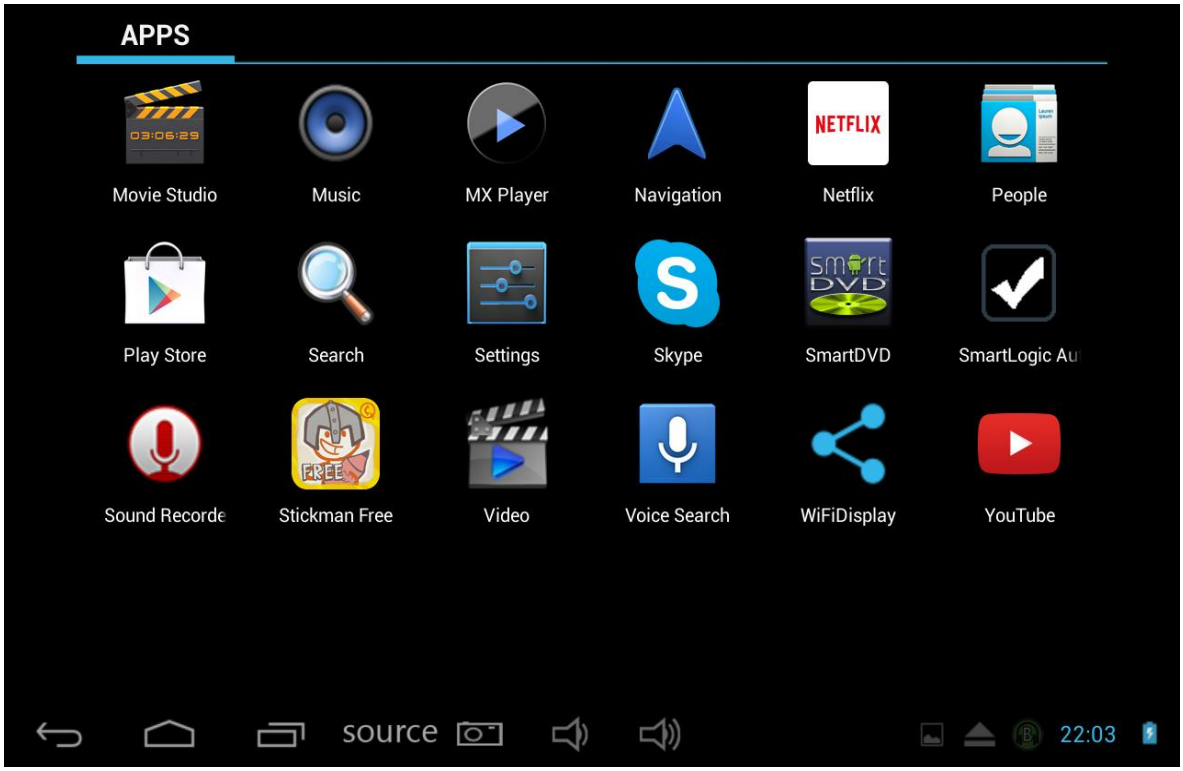

The Automotive Settings is located in the Apps folder on the 2nd page. Simply open the Apps folder and swipe right to get to the 2nd page. Tap the Automotive Settings Icon to open.

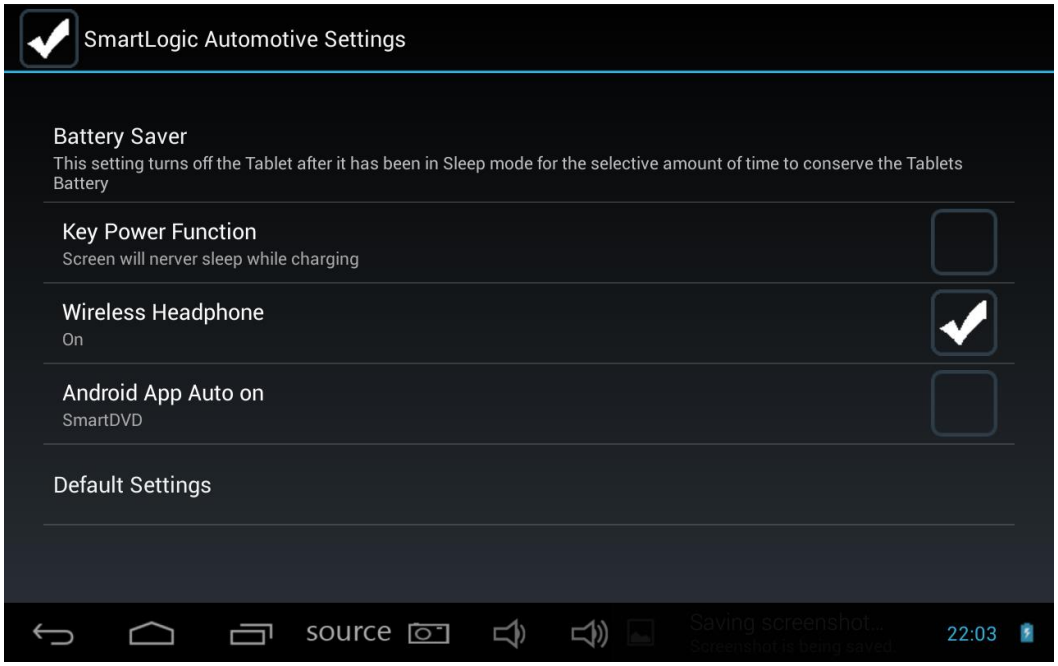
SmartLogic Automotive Settings
Battery Saver
This setting turns off the Tablet after it has been in Sleep mode for the selective amount of time to conserve the Tablets Battery
Key Power Function
Screen will nerver sleep while charging
Wireless Headphone
On
Android App Auto on
SmartDVD
Default Settings
source
Saving screenshot...
Screenshot is being saved
22:03

Battery Saver – This feature turns off the Tablet after it has been in Sleep mode. You can choose the amount of time to conserve the Tablet battery.

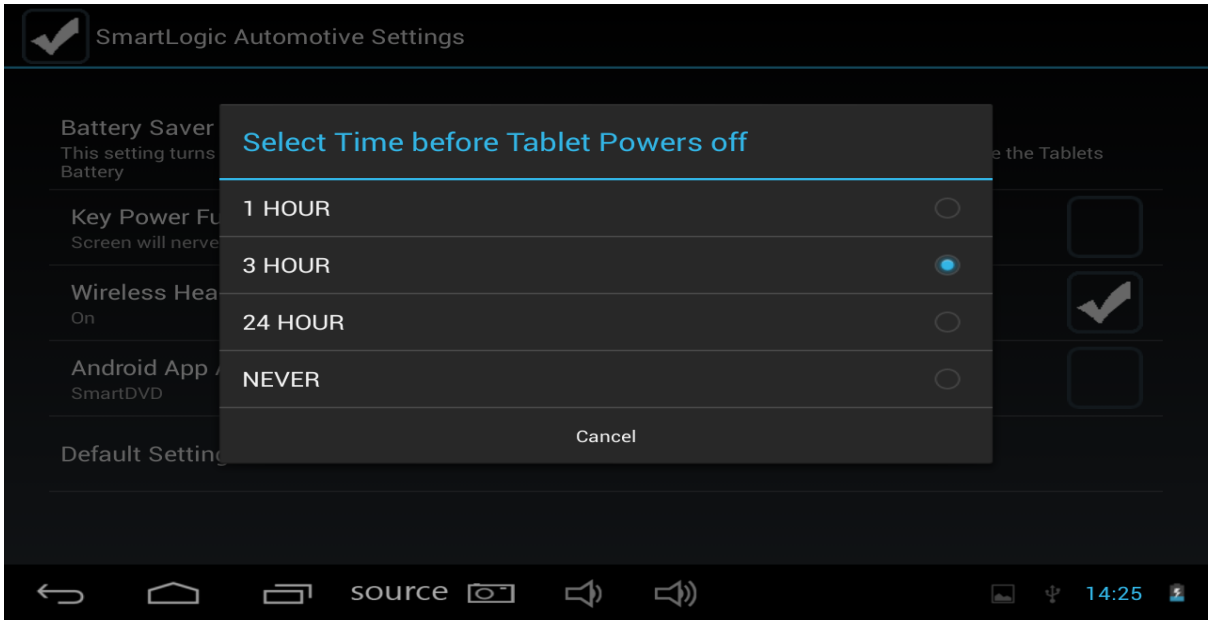

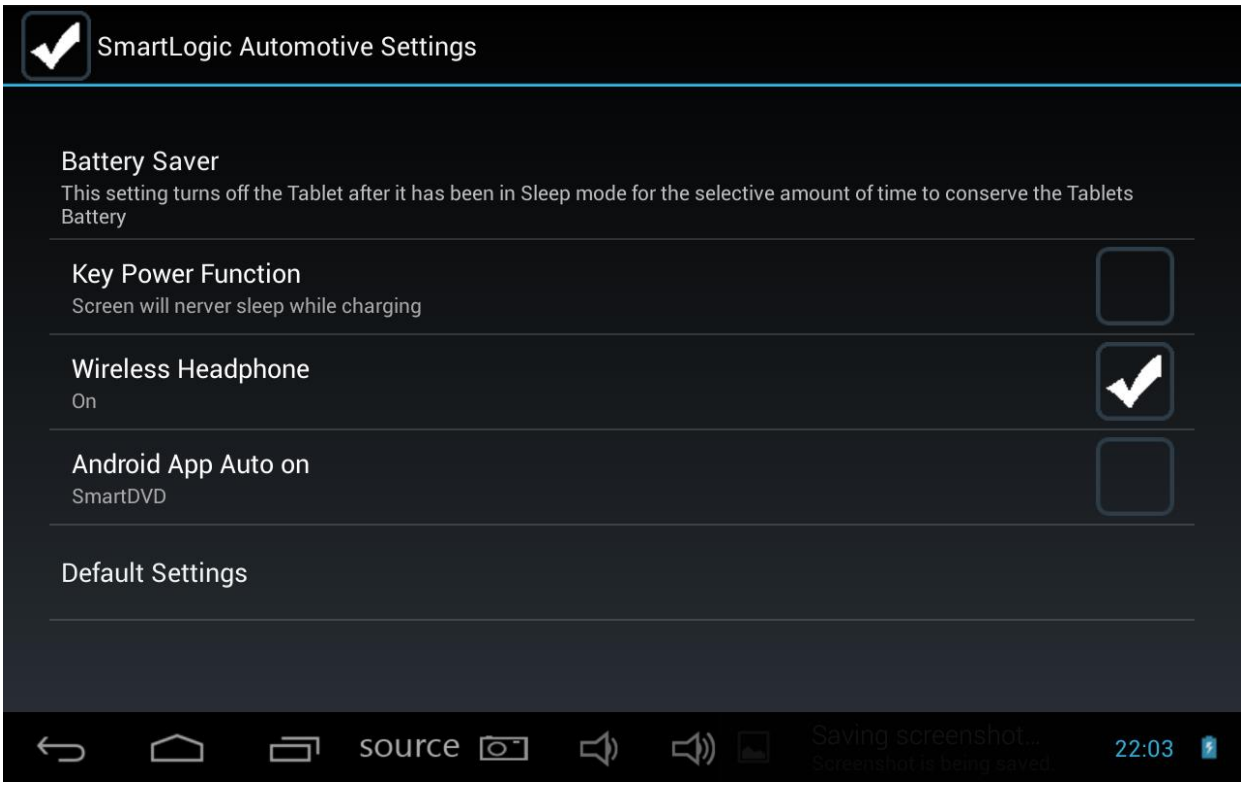
SmartLogic Automotive Settings
Battery Saver
This setting turns off the Tablet after it has been in Sleep mode for the selective amount of time to conserve the Tablets Battery
Key Power Function
Screen will nerver sleep while charging
Wireless Headphone
On
Android App Auto on
SmartDVD
Default Settings
source
Saving screenshot...
Screenshot is being saved
22:03

Key Power Function – When checked ON, this feature will allow the screen to never sleep while charging in the headrest.

Wireless Headphones – When checked ON, this feature allows the audio to play through the supplied IR wireless headphones. The Driver side headrest should be set to "A" IR transmitter and the Passenger side headrest should be set to "B" IR transmitter.

Note: To change the IR transmitter from "A" to "B" on your Headphone tap the power button after the headphone has been powered ON. To check the IR setting on the Tablet, tap the time

on the bottom right hand corner.



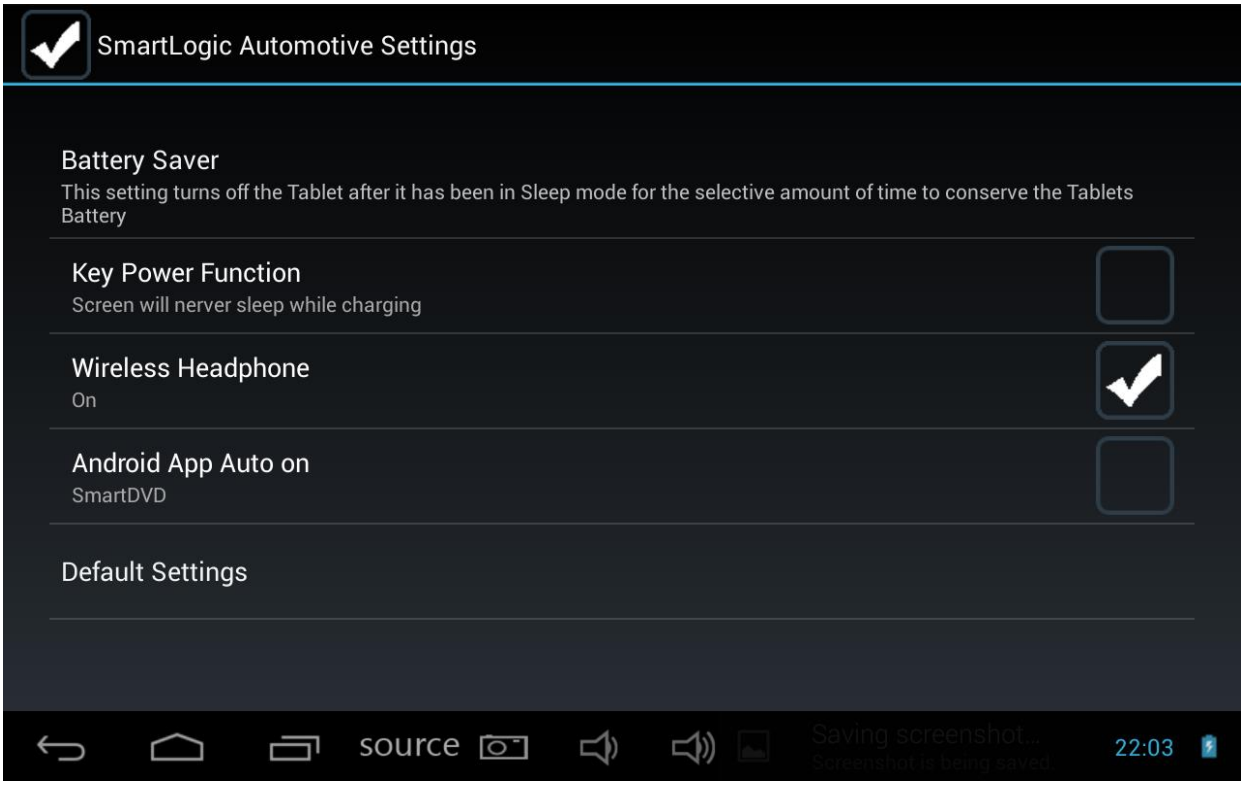
SmartLogic Automotive Settings
Battery Saver
This setting turns off the Tablet after it has been in Sleep mode for the selective amount of time to conserve the Tablets Battery
Key Power Function
Screen will nerver sleep while charging
Wireless Headphone
On
Android App Auto on
SmartDVD
Default Settings
source
Saving screenshot...
Screenshot is being saved
22:03

Android App Auto On – When checked ON, this feature will allow the SmartDVD app to open automatically when the Tablet wakes up.

Default Settings – This feature will restore the Tablet factory settings.

6. FM Transmitter

To access the wireless FM Transmitter, open the Apps folder and locate the FM Transmitter app on the first page.

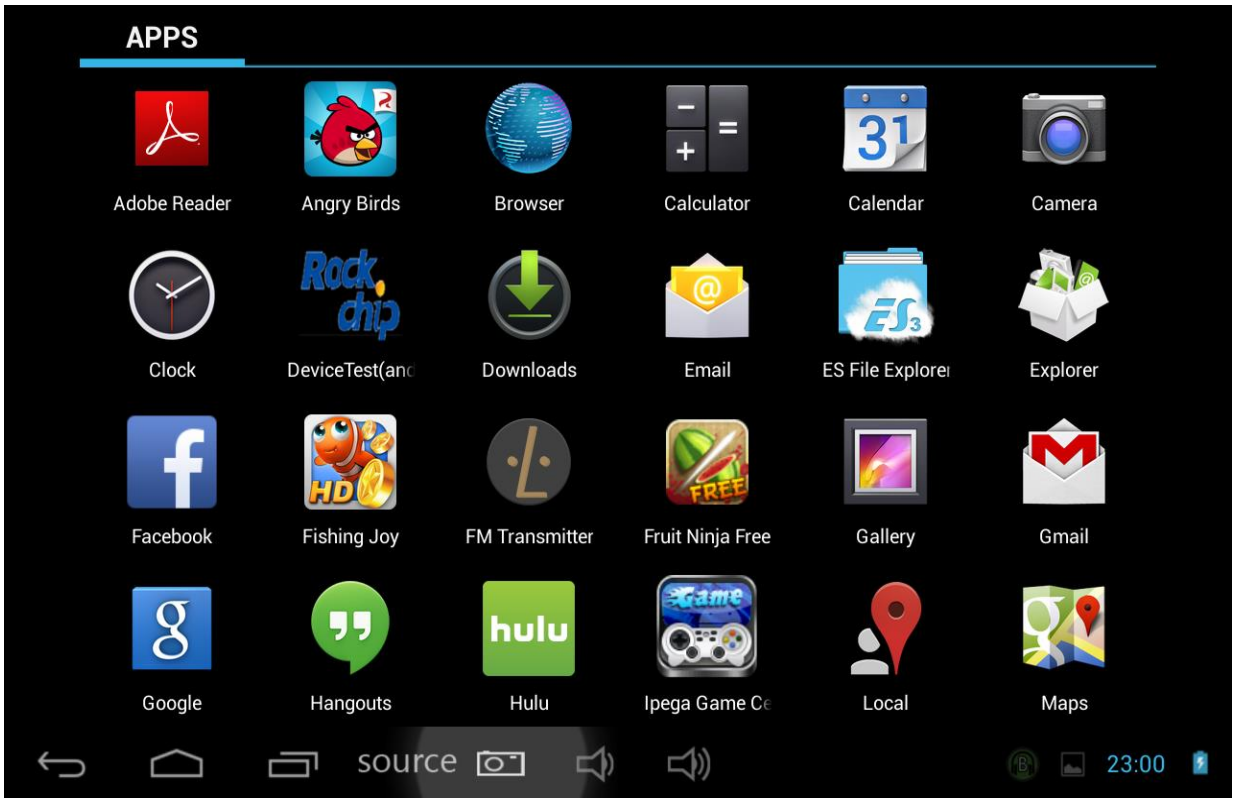

To turn ON the FM transmitter, press the Power button.

The Power button will light up to indicate it is ON.

To Search for available stations, press the arrow buttons.
Once you have found a desired FM station, you can save that station on the Presets

Set the station that you selected on your Tablet to the vehicles FM radio. **Note: Wireless FM Transmitters will differ from vehicle to vehicle and from area to area.**

It is recommended to use the AUX out  **from the headrest to your stereo for direct audio. A 3.5mm stereo to 3.5mm stereo cable is all that is required.** The Speaker Mute button

is designed to mute the Tablets internal speaker when the Tablet is

undocked. **Note: The Tablets internal speaker automatically will mute when docked.**

7. Closing Running Apps

When you're using apps or playing games on the tablet, and "exit" them by touching the **Back** or **Home** button, they don't really stop running. They are running in the background in an idle state, which is good in some cases such as switching between apps without having them close.
However, in some cases it may not be good. Having too many apps and Games running may cause problems with the performance of the tablet. It is recommended that you close these apps completely to free memory on the tablet.
To access the list of running apps, touch the **Recent Apps** button.

You will see a row of all the apps and games that are currently running on your device. If you want to jump to any of these apps, simply tap the

app that is displayed. To close an app, drag it either up or down on the screen until it disappears.

8. Update the Tablet

You can use a USB cable to connect your tablet to a Windows computer and transfer music, pictures, movies and other files. Most importantly, you can update your Tablet when Vizualogic releases new updates. You can also download new updates through your Gmail account. **Note: The home charger that's included in your kit will also work as your Tablet to USB cable.**

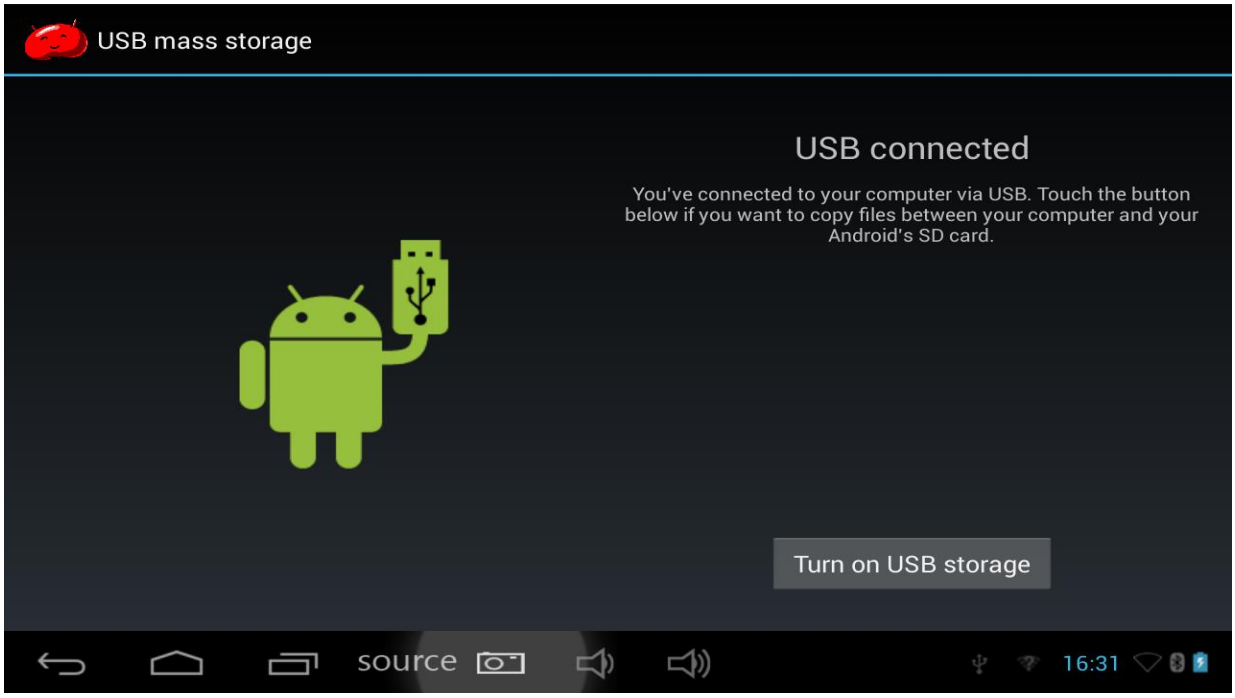
USB mass storage
USB connected
You've connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage
source
16:31

When you connect your tablet to the USB port on your computer, touch the "Turn on USB storage" button to connect your tablet to the computer.

Open the Tablet file folder when it displays on your computer screen. Next, open the Download folder where you will drag the updated APK file into the download folder. **Note: Add the update APK file to your desktop so you can drag the update into the download file.**

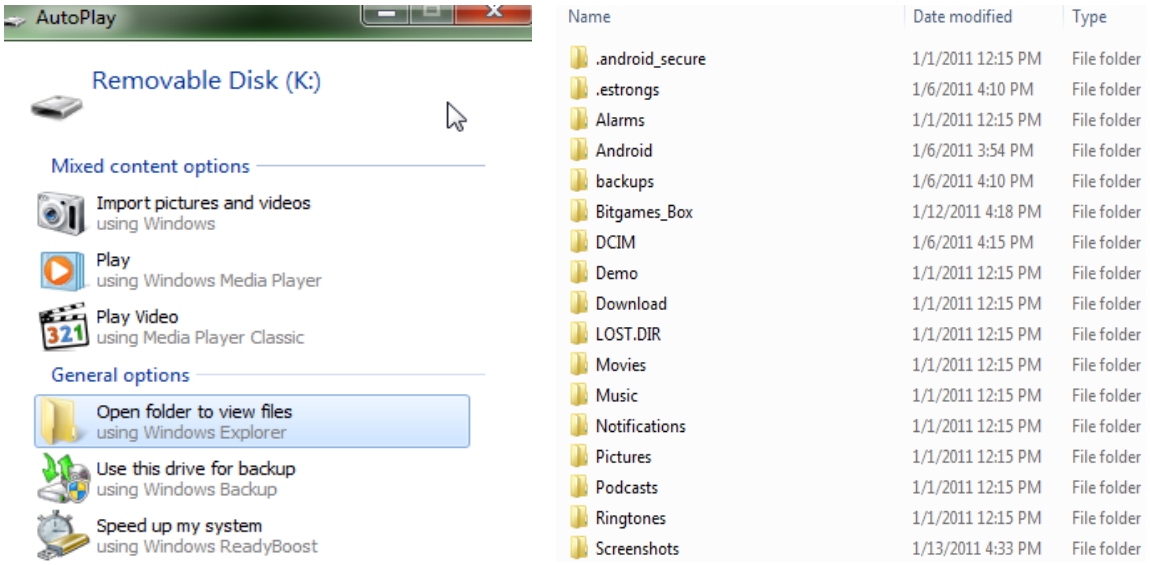
AutoPlay
Removable Disk (K:)
Mixed content options
Import pictures and videos
using Windows
Play
using Windows Media Player
Play Video
using Media Player Classic
General options
Open folder to view files
using Windows Explorer
Use this drive for backup
using Windows Backup
Speed up my system
using Windows ReadyBoost
Name
Date modified
Type
.android_secure 1/1/2011 12:15 PM File folder
.estrongs 1/6/2011 4:10 PM File folder
Alarms 1/1/2011 12:15 PM File folder
Android 1/6/2011 3:54 PM File folder
backups 1/6/2011 4:10 PM File folder
Bitgames_Box 1/12/2011 4:18 PM File folder
DCIM 1/6/2011 4:15 PM File folder
Demo 1/1/2011 12:15 PM File folder
Download 1/1/2011 12:15 PM File folder
LOST.DIR 1/1/2011 12:15 PM File folder
Movies 1/1/2011 12:15 PM File folder
Music 1/1/2011 12:15 PM File folder
Notifications 1/1/2011 12:15 PM File folder
Pictures 1/1/2011 12:15 PM File folder
Podcasts 1/1/2011 12:15 PM File folder
Ringtones 1/1/2011 12:15 PM File folder
Screenshots 1/13/2011 4:33 PM File folder

When finished, be sure to touch, "Turn off USB storage" to disconnect the device from the computer.

On the Tablet, open the SD/USB app on the Home screen. Tap the Internal Memory button to open. **Note: You might have to Open the Home**

icon to access the Internal Memory page.

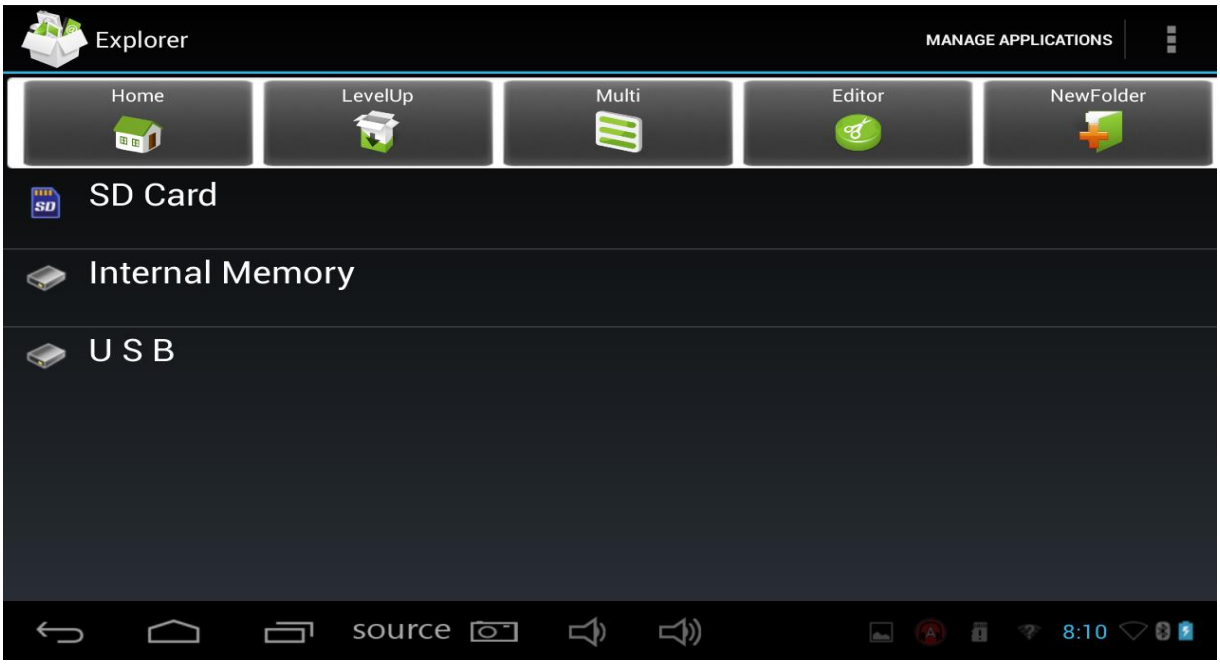

Open the Download folder to access the Update APK file that you added from your computer desktop.

Select the Update APK file from the list in the Download folder. For example, shown below is a SmartDVD 1.7 APK file. Tap the file to start Download.

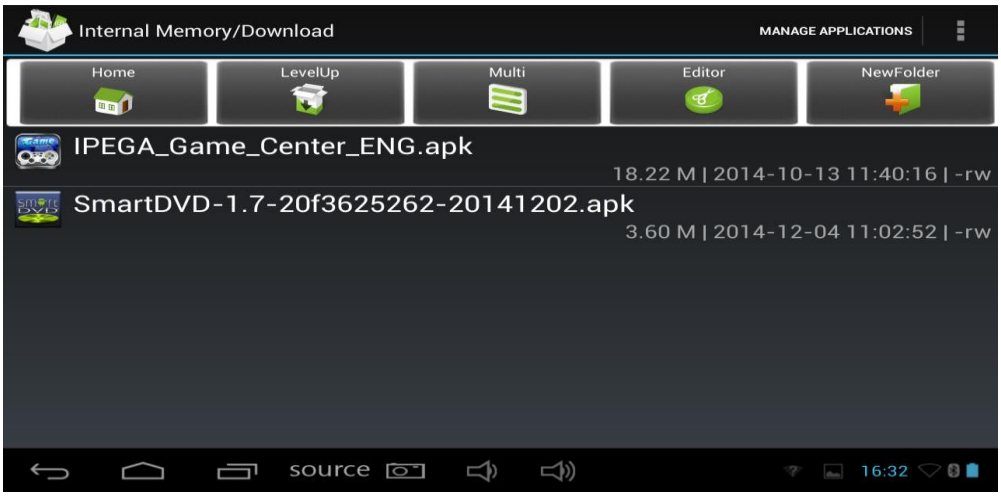

For security, your Tablet might block installation of apps from an unknown source.

Install blocked
For security, your tablet is set to block installation of apps obtained from unknown sources.
Cancel
Settings

If you receive this message, open the settings and press the Unknown Sources and check the empty box.

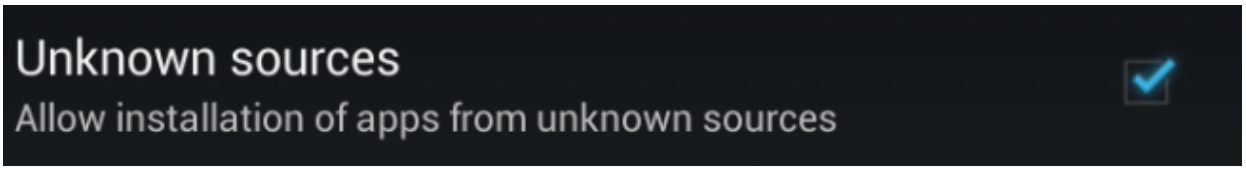

Press the back button to go back to the Download APK file screen shown on previous screen.

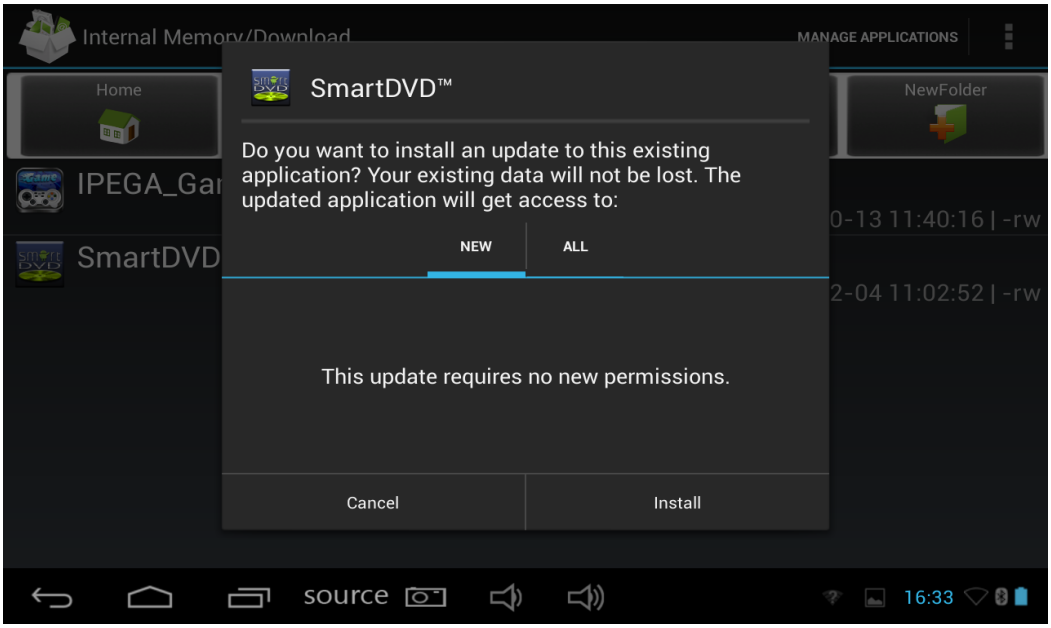

Next, press the Install button to start the Download. This might take a few minutes for your Download to complete.
Press the Open button when Download is complete. The Tablet is now updated.

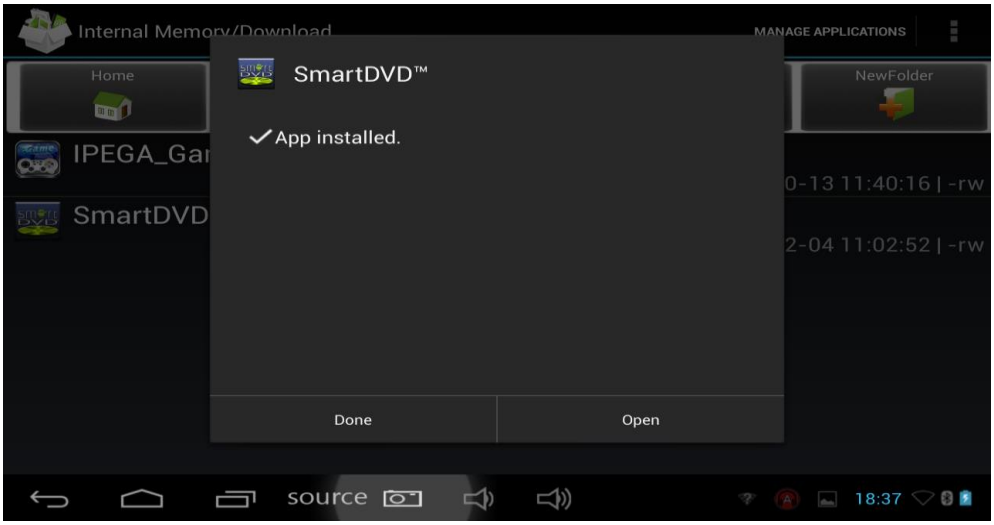

Refer to www.smartlogictablet.com for Updates, Wallpapers, Accessories, Product Registration, Product Manuals & "How to" YouTube Videos.